


**BROWN JORDAN®**  
**OUTDOOR KITCHENS**

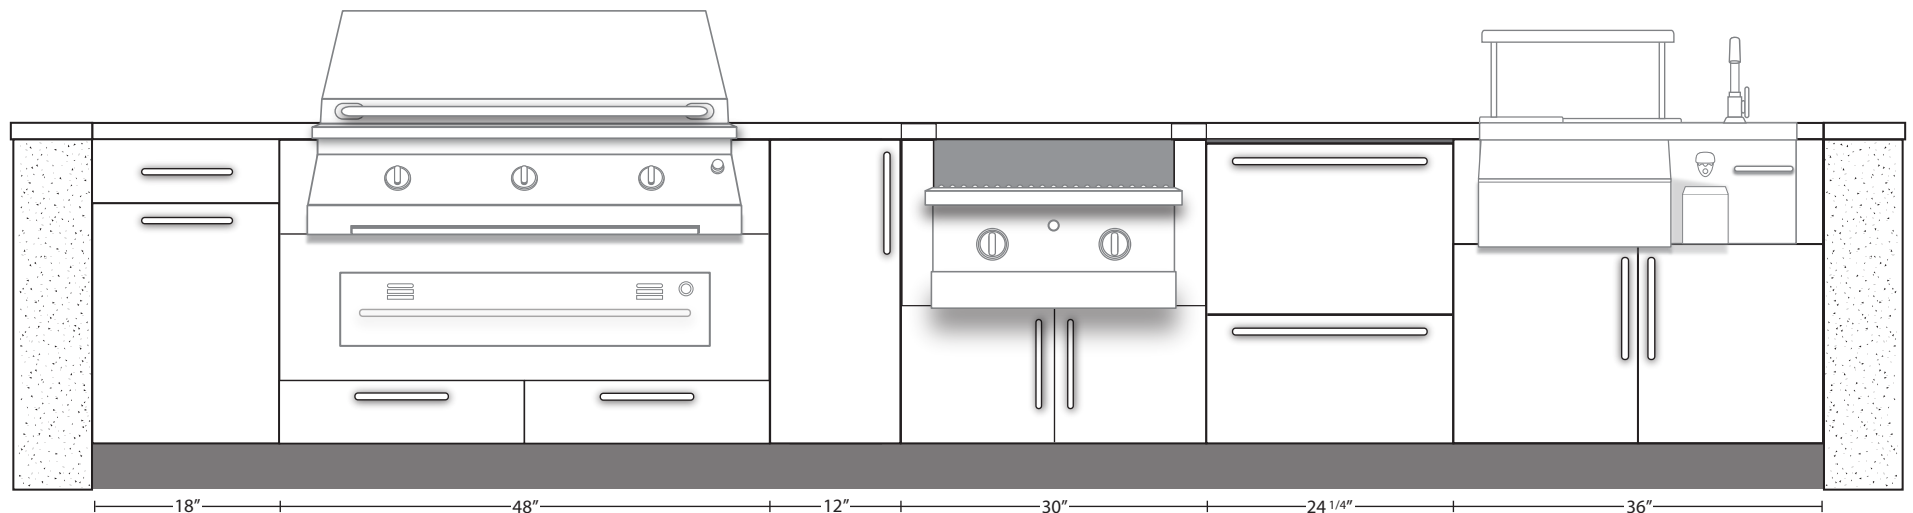

# Installation Guide:

# Stainless Outdoor Kitchen Cabinets

# TABLE OF CONTENTS

---

IMPORTANT: READ FIRST	4
INSTALLATION TIPS AND SITE PREP	6
Storage Cabinet	8
Modification of Standard Legs	9
Drawer Removal	11
Appliance and Grill Cabinet	12
Cabinet Installation/Joining Cabinets	14
Straight Fillers	17
Angle Fillers	18
Refrigerator Spacers	20
ORP/OBX Leg Cups	22
Toe Kick	24
Toe Kick Splice	25
Stainless Steel Leg Covers	27
Stainless Steel Leg/ADA Leg Assembly	28
ADA Leg Square	29
Cabinet Door Adjustment	30
Reinstalling Drawers	31
Drawer Adjustment	32
PPS System	33

---

PPS Outer Panels	34
Equal Back Panels	35
Side and Back Panels	36
OCPS Column	37
ORP Cabinet Connector	38
Wall Cabinets	40

## IMPORTANT: READ FIRST

---




This guide contains basic information required to install standard Denver Outdoor Kitchens cabinetry. The specifics of the design, configuration, location, space and other factors influencing your project, may require deviations from the stated instructions.

It is recommended that installation be performed by a licensed contractor or other professional with experience installing cabinetry.

### Observe Local Building Codes

Local building codes may supersede the information contained within this guide. It is imperative that you understand and adhere to local codes and regulations prior to installing the cabinetry and appliances.

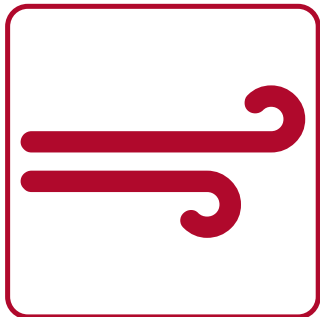

### High Wind Areas

If you are installing the cabinetry in a high-wind area, such as a rooftop or in a geographic region that is susceptible to tornados or hurricanes, you are likely required by building code to secure the cabinetry to an immovable structure such as a wall, floor or concrete base.



For proper installation of outdoor kitchen cabinetry, it is essential to make sure each cabinet is level, square and plumb.

Failure to do so will result in a myriad of problems, such as poor cabinet door adjustment and/or installation of countertops, etc.

- Obtain proper level for every cabinet using a minimum 4 ft. long level. A 6 ft. or 8 ft. level is preferred.
- Level from corner to corner, left to right and front to back on each cabinet as you install.
- Ensure that each cabinet is also vertically plumb to prevent tilt/leaning.
- Always begin at the highest point of the installation site and establish a level line above the floor from that point.



### Installation Resources

For additional resources, such as installation videos, PDF instructions and cleaning guides, visit:

[danver.com/resources](http://danver.com/resources)

# INSTALLATION TIPS AND SITE PREP

---

## Prepare area for the kitchen:

Make sure that your installation site is as level as possible and that there will be minimal additional landscaping to be performed after the cabinets are installed.

When starting the installation, check floor for pitch both side-to-side and front-to-back to find the highest point. Your choice of under-counter appliances may impact and determine the finished height of the cabinetry.

Level line across back wall (if applicable). If there is a corner, start in the corner and adjust cabinets to this line.

## Utility access holes:

All DANVER cabinets come standard with utility access holes for services (electrical, plumbing, gas). It is encouraged that all services align with these existing access holes. While the cabinets can be notched or have holes drilled in them, it is not recommended. In the event a new hole does need to be made, using a metal nibbler is the recommended method. A metal bit hole saw may also be used to drill through cabinets.

GFI electrical outlets should be placed in the cabinet adjacent to the appliances to allow for ease of resetting the GFI and to ensure proper fit of the appliance.

## Notes on unpacking cabinets:

- Carefully review the packing list to verify your order has been shipped complete. Unpack cabinets and parts, making sure not to scratch the product, misplace any hardware or accessories.
- Hardware bags included for each cabinet contain the cabinet legs and screws for assembly. If optional stainless legs were purchased those will be in place of the standard legs.
- Doors and drawers are shipped installed with standard stainless steel pulls.
- It is recommended that all doors, drawers and removable/pullout shelving be removed during the placement and installation process.
- Uninstall shipping brackets from appliance cabinets BEFORE ATTACHING ADDITIONAL CABINETS and reinstall in proper position near the back of those cabinets where they act as counter top supports. See page 10 for full details.
- If toe kick(s) were ordered, they will be shipped separately via ground transport.

# INSTALLATION TIPS AND SITE PREP

---

## Basic Notes on Installation:

Required Tools:		
Power screw driver with #2 Phillips head bit	#2 Phillips head manual screw driver	Level
Tape measure	Saw (if optional toe kicks were ordered)	

- DO NOT completely remove vinyl protective coating until installation is complete. Peel back vinyl only in areas where it will be hard to remove after installation (e.g. back and side panels, fillers).

NOTE: The vinyl protective coating is for temporary protection during transport and installation. Prolonged exposure to light and heat may cause degradation, which can stain or damage the cabinets. Cabinets should be warehoused in a cool, dry location or remove the vinyl protective coating for extended storage.

- Remove all drawers, doors, and adjustable/pullout shelving before installation. This will make cabinets easier to lift, install and gives access to installation areas. See page 9 for full drawer removal details.
- Install cabinets in final position. The cabinets are difficult to move after assembly is complete.
- The legs on the high side should be set so that the legs at the low side are not extended over 5.5" and that the cabinets next to any refrigerator/ice maker be 34.5". This ensures that the toe kick will fit under all cabinets without modification.
- Make sure each cabinet is level, square and plumb at each step of the installation process.
- Cabinets may flex until they are locked into place with one another. If necessary, adjust and tighten screws on the cabinet top rails prior to installation. Attach single cabinets to a frame or a wall in masonry, stucco, stone or one-piece island installations.
- Install cabinets completely (screwed together, counter top installed, appliances installed, doors installed, drawers returned to original positions and level is obtained) before adjusting doors or drawers. See pages 24-26 for proper adjustment details.
- Side and back panels (ex. OSP, OFE, OFE APPLIANCE, OFEGF, OBP, OBPV, OBPVGF, WFE, WSP) come pre-installed on base and wall cabinets.

[Watch Video: Installation Overview](#)

(Click link or scan code)



# ASSEMBLY & INSTALLATION: Storage Cabinet

---

Compare and verify product number(s) on box(es) to the order and packing list. Carefully unpack cabinets.



1. Remove and check hardware bag/box that contains legs, screws for assembly and attaching cabinets to one another, extra bumpers, for access holes.

NOTE: Packed with each cabinet is a Top Bracket Connector. You will end up with one extra when you finish installation.

2. Remove foam packing material and discard.
3. Place the cabinet on its top and install the legs into the Receivers (leg cups) attached to the bottom of each cabinet. Simply push in until snug. Preset all legs to about 4.25" to speed leveling process. 4.25" is approximately where the bottom of the leg body is even with the top of the black leg adjuster. When installed, the toe kick area will be 4.5". If stainless legs, stainless leg covers, or stainless ADA legs were ordered, refer to pages 19-21 for proper leg installation.

NOTE: When wall cabinets are used as a replacement for base cabinets, legs install in the same fashion.

4. Install any optional shelving or internal accessories using the supplied #10 screws in holes provided on the sides of the cabinet from the inside-out

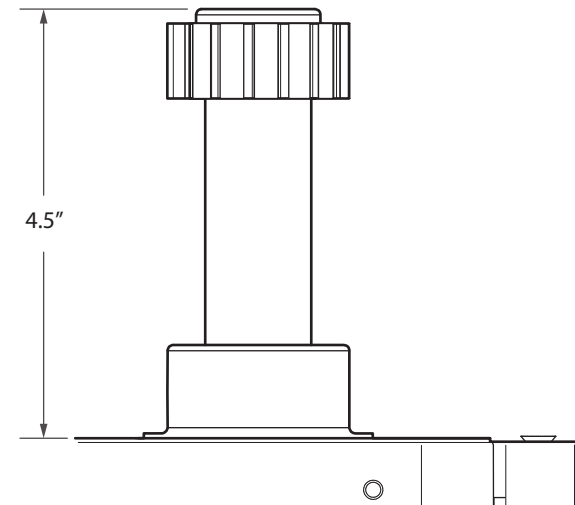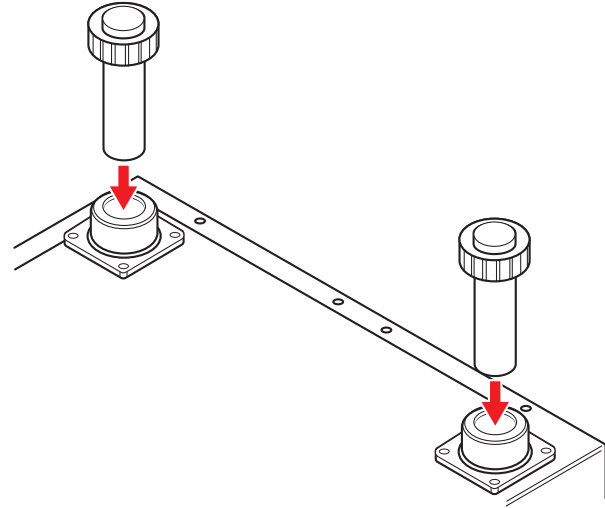




# INSTALLATION: Modification of Standard Legs

---


In the event that the cabinet needs to sit below our standard minimum leg height, the standard legs can be modified. This modification will allow the legs to be at a reduced height, but still afford the ability for adjustment, ensuring correct leveling of cabinets.

1. Using a saw, cut the leg where indicated in the illustration. Discard the unused portion.
2. Remove any burrs along the outside of the leg.

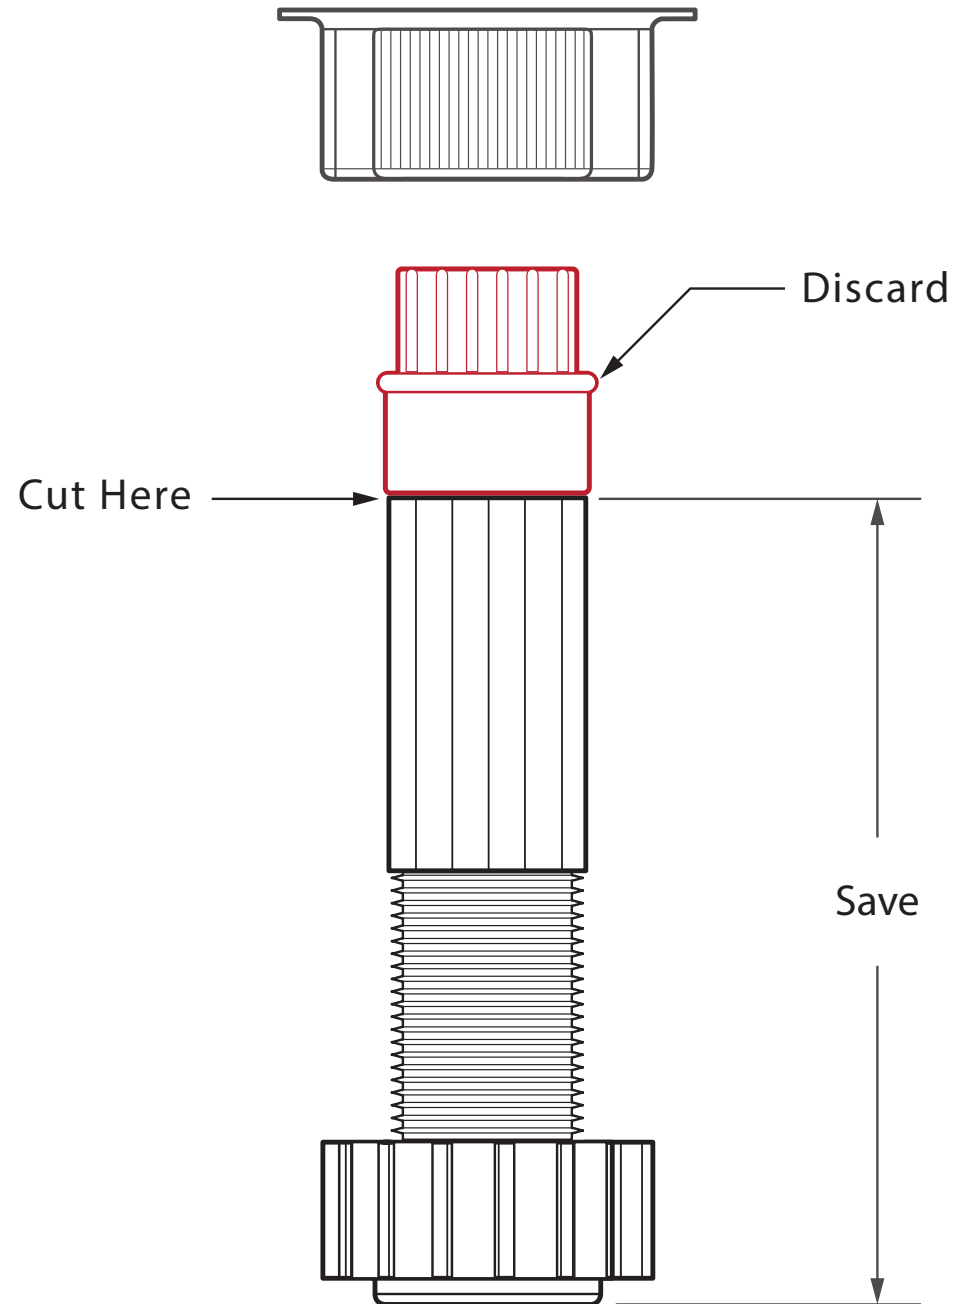


[Watch Video: Leg Installation](#)

(Click link or scan code)

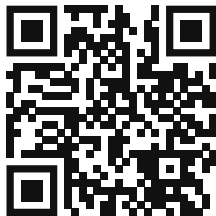


## INSTALLATION: Modification of Standard Legs

---

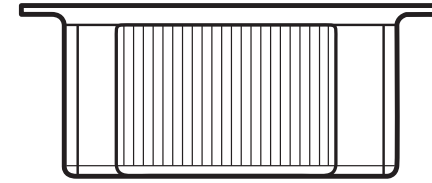

1. Install the modified leg into the receiver. Push until snug.
2. Adjust the leg as needed for correct height and leveling.

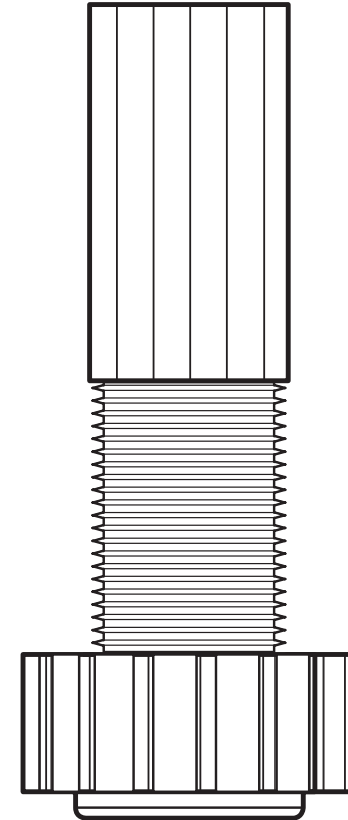


# ASSEMBLY & INSTALLATION: Drawer Removal

---


Removal of cabinet drawers allows for ease of moving, assembly and installation.

Be sure to store drawers away from the work site to prevent damage.

Note: Pull-out trash and shelving parts operate in similar fashion, but the Release Levers are located on the sides.

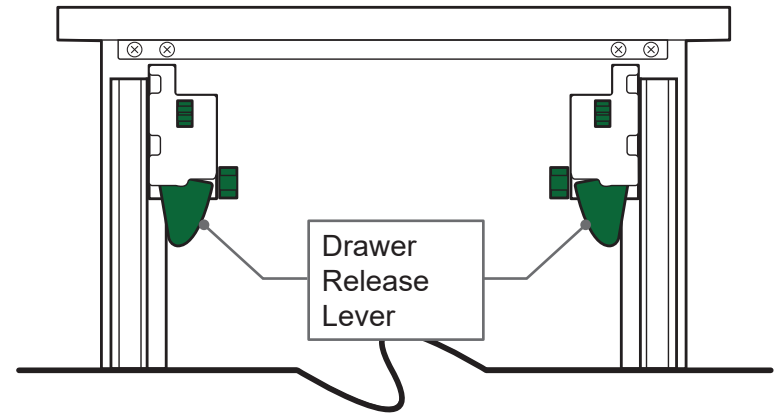

1. Open the drawer fully.
2. Locate the Drawer Release Levers on the underside of the drawer.
3. Depress both Drawer Release levers at the same time and hold.
4. Pull the drawer all the way out of the cabinet. See page 16 for reinstallation instructions.

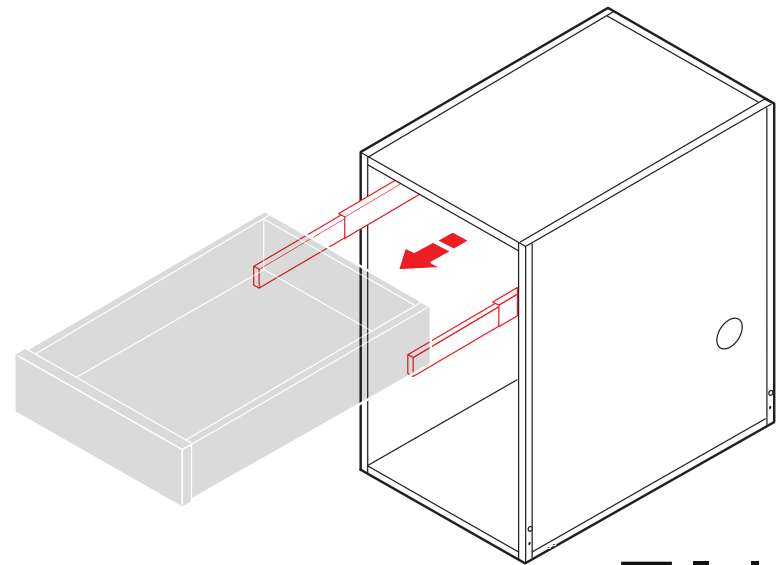

**[Watch Video: Drawer Installation/Removal](#)**

*(Click link or scan code)*




# ASSEMBLY & INSTALLATION: Appliance and Grill Cabinet

Once the cabinet(s) are in place, the Shipping Bracket can then be removed.

1. Remove the Shipping Bracket from the front of appliance cabinet by removing the #10 screws. Relocate to the back of the unit using the original screws. This will become the Rear Countertop Support. Its location is dependent upon the depth (front to back) of the grill/appliance, so it is necessary to know the grill manufacturer's specified depth. Take the manufacturer's depth and add .5" to the measurement. Then measure from the front, including the door or trim, and locate the pre-drilled holes at that location in the cabinet side walls. Using the original #10 screws, attach the bracket so it is flush with the top of the cabinet.


NOTE: For grills that do not hang from countertop: Cabinets designed for appliances that sit on the deck of the cabinets (e.g. Viking, Dacor, etc.) are shipped with spacers to shim the grill to the height of most granite countertops. If the counter is more than 1" thick, additional shimming must be used (not supplied). Grill liners/insulation jackets are not required nor accounted for in the cabinet design.

2. Remove drawers and accessories that may hinder assembly and store in a safe place.
3. Place the cabinet on its back and install the legs in the Receivers (leg cups) attached to bottom of each cabinet. Simply push in until snug. Preset all legs to about 4.25" to speed the leveling process. When installed, the toe kick area will be 4.5". Refer to page 17-20 for proper leg installation for all leg options.
4. Grill/Appliance cabinets come with (2) Front Countertop Supports or "U" brackets. These brackets are used primarily as additional countertop support on the side of the grill.
5. There are four (4) access holes in the back panel of the Grill/Appliance cabinets, two (2) top, two (2) bottom. The top two (2) are for natural gas venting, the bottom two (2) are for propane venting. Consult your grill manufacturer and/or local building codes for proper ventilation.

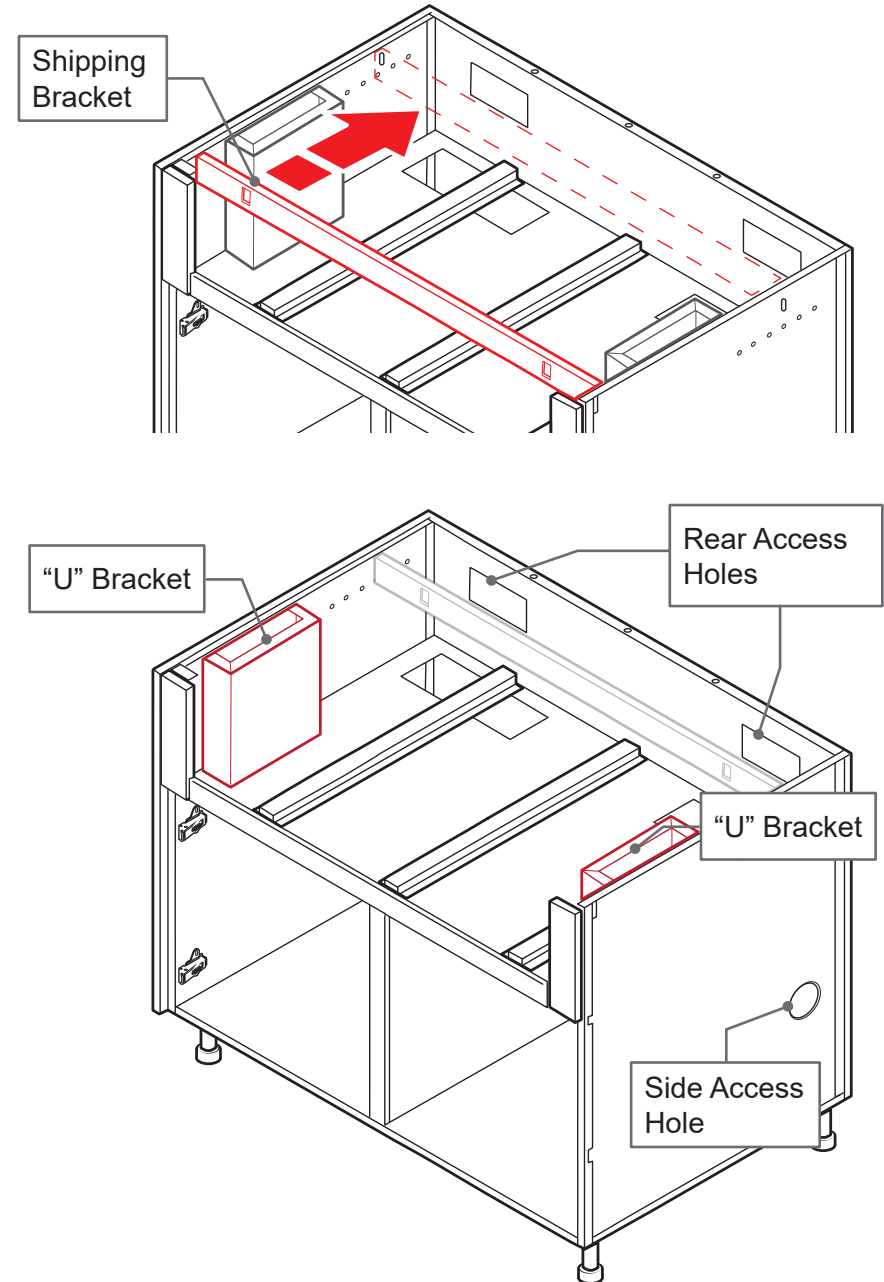

## ASSEMBLY & INSTALLATION: Appliance and Grill Cabinet


Grill Types	
Hang on Counter Top	
Alfresco	Kitchen Aid
AOG	Lynx
BBQ Galore	Memphis
Blaze	Napoleon
Bull	PGS
Cal Flame	Profire
Capital	Solaire
Coyote	Twin Eagles
DCS	Vermont Castings
Dynasty	Vidalia
Fire Magic	Viking
GE	Vintage
Hestan	Wolf
Jenn-Air	
Sit on SS Shelf	
Dacor	Hasty-Bake (charcoal)
TEC	Kalamazoo Side Burner

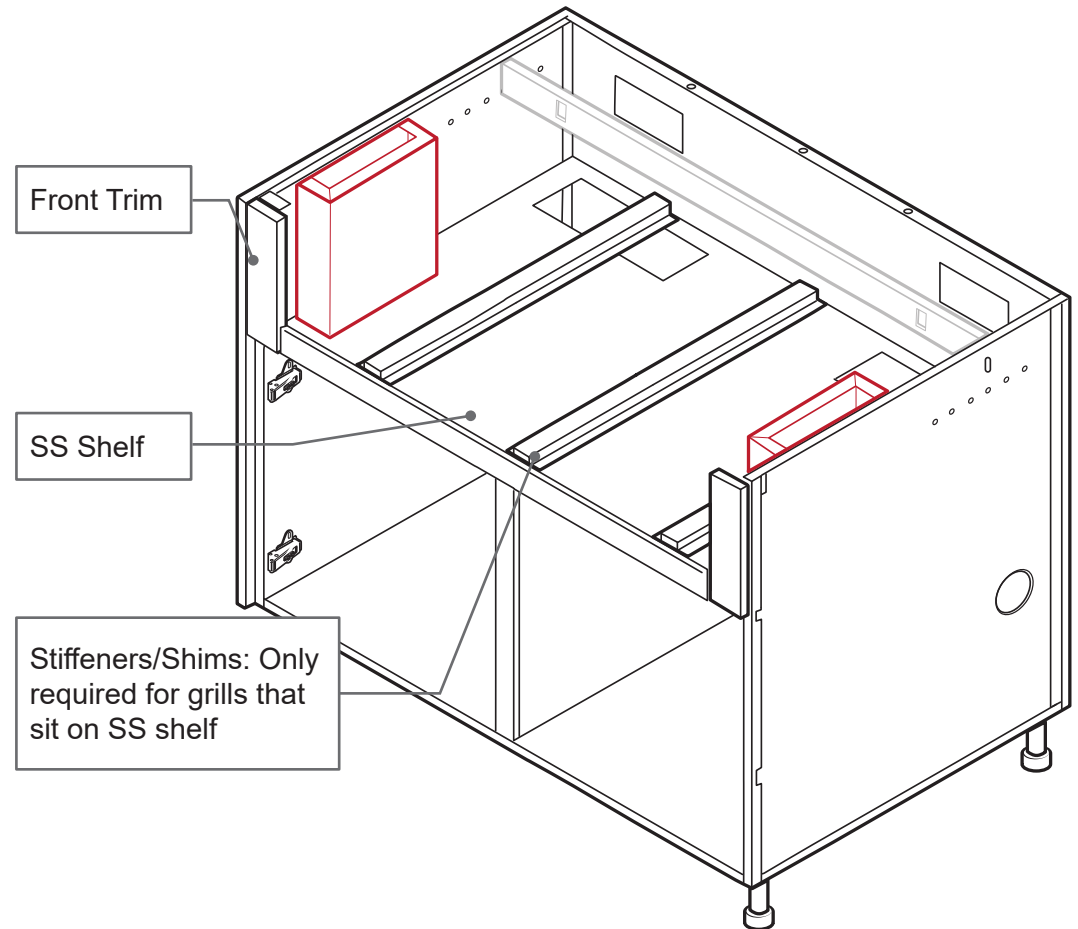

Note: U Brackets may arrive with a single screw attachment and may need to be positioned further back in the cabinet.

[Watch Video: Install Grill Cabinets](#)

(Click link or scan code)

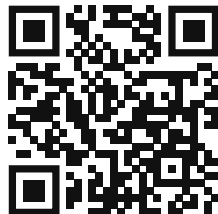


# ASSEMBLY & INSTALLATION: Cabinet Installation/Joining Cabinets


---

1. Place cabinet(s) in final position. Use the cabinet that would be on the highest ground to set the height first, maintaining the minimum 4.5" toe kick height.

NOTE: Place the grill cabinet on the level surface first since it is the most difficult to move around.

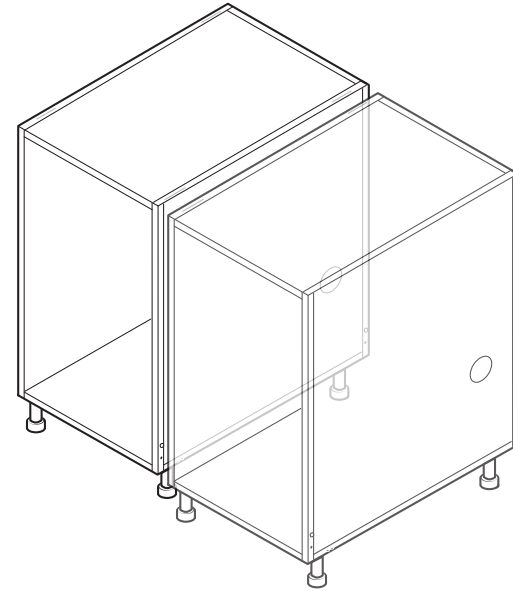

2. Partially install #10 screws in Easy-Alignment holes (2nd from bottom on front and rear flange) on right side of cabinet. Do not tighten.

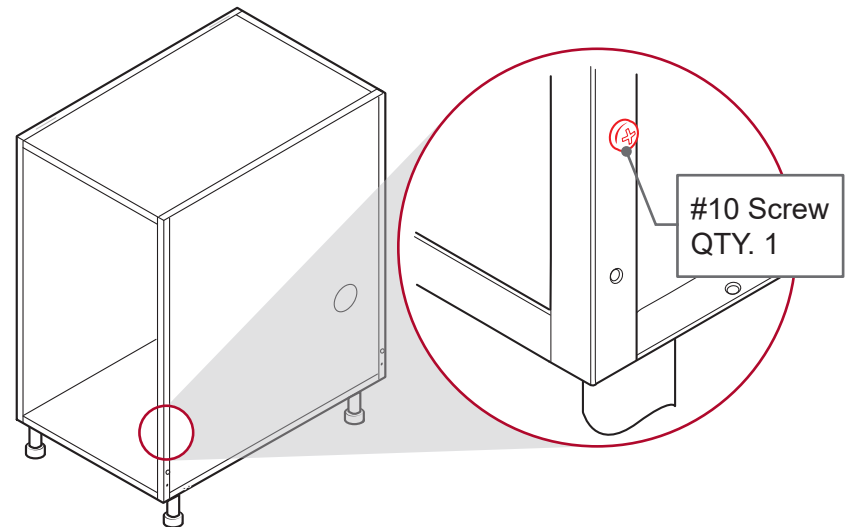

**[Watch Video: Attaching Cabinets](#)**


*(Click link or scan code)*



## ASSEMBLY & INSTALLATION: Cabinet Installation/Joining Cabinets


---

3. Tip & lift either cabinet over screw heads through “Dog Bone” hole

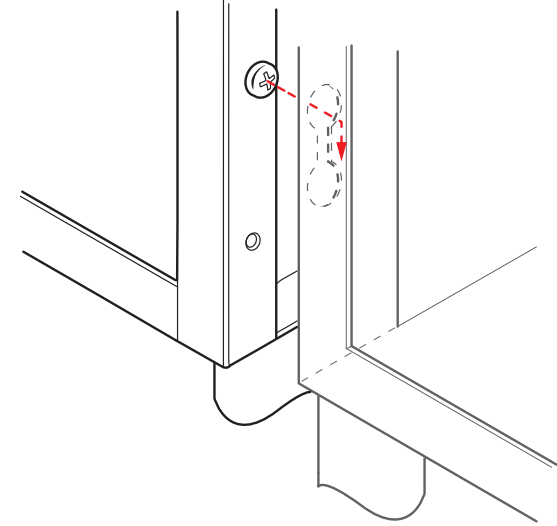

4. Level Cabinets together in all directions. All cabinets must be level, plumb and square.

5. Tighten the two (2) screws from Step 2 through access holes (Inside Cabinet)

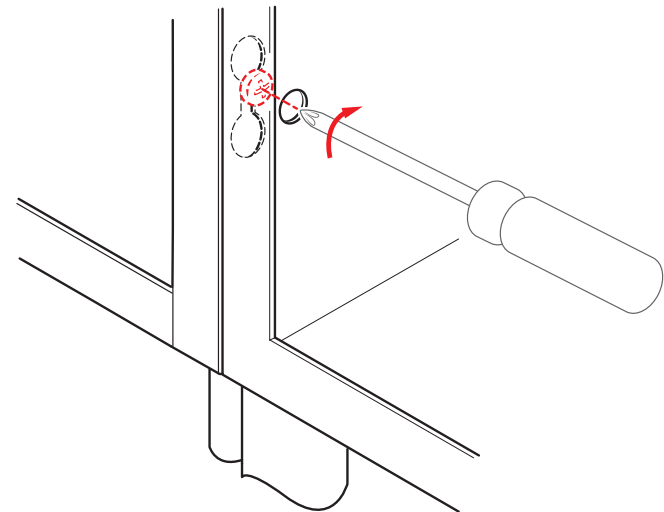


## ASSEMBLY & INSTALLATION: Cabinet Installation/Joining Cabinets

---

6. Place the Top Bracket Connector inbetween the top plates of the cabinets. Use a soft mallet or similar tool to ensure the Top Bracket Connector is seated fully.

Cabinets should now be firmly attached.

NOTE: If cabinets are installed in an island format where the back is accessible, you may tighten rear alignment screw at back flange. If installed against a wall or if the back is otherwise inaccessible, rear tightening is not necessary.

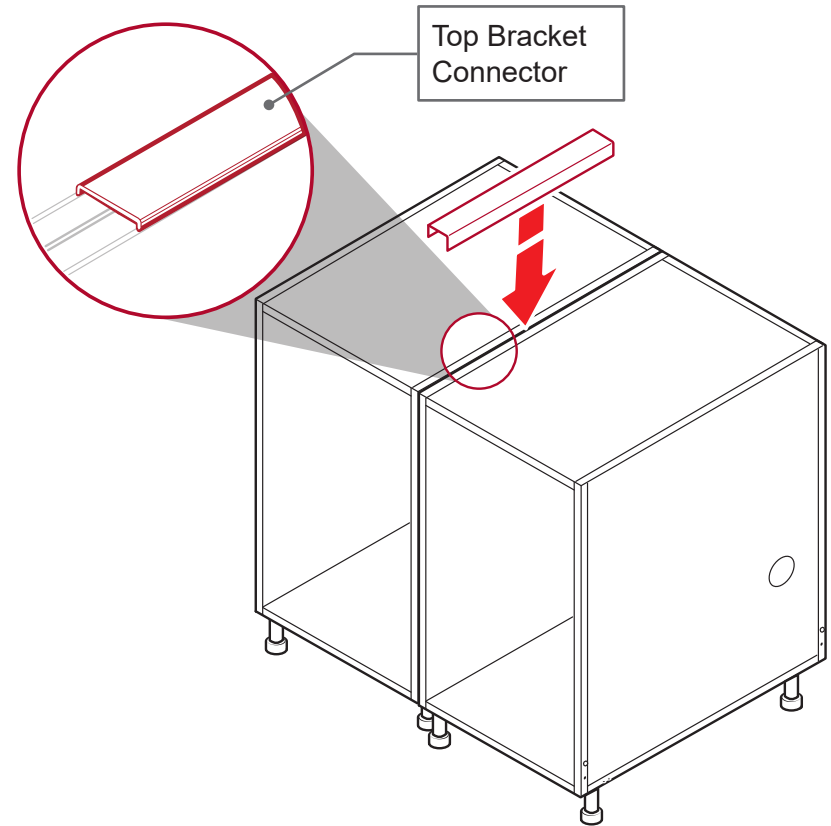




# ASSEMBLY & INSTALLATION: Straight Fillers

---

Front fillers are offered in standard sizes from 1" to 6+". They are also available in custom sizes (with an engineering charge). The designation for a front filler is OFLxx where the xx is the width of the filler. The front filler design incorporates a small "Joggle bend" to provide a proper reveal on either side adjacent to the cabinets or wall. Rear fillers have straight bends and do not provide a reveal. The designation for a rear filler is OFLxx where the xx is the width of the filler.

NOTE: Front fillers are designed to extend to the face of the cabinet door.

1. Partially Install three (3) #10 screws in the accessory holes in the front flange of the cabinet(s) for front fillers and in the side of the back panels for rear fillers. Do not tighten.
2. Align the front filler to the face of the door and slip the keyholes in the filler over the previously installed screws (Keyhole Alignment Method) from step 1.
3. Align the rear filler to the back panel and install the same way as the front filler.
4. Tighten screws.

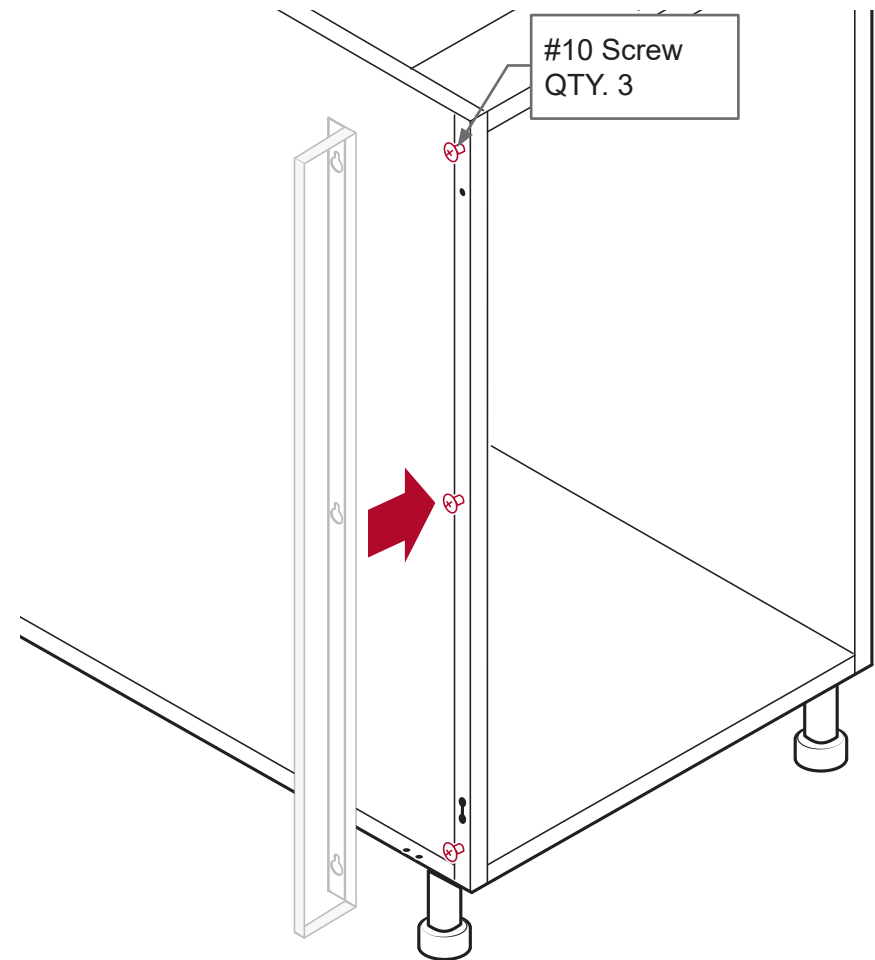


# ASSEMBLY & INSTALLATION: Angle Fillers

---


Angle fillers are offered standard in 90 degree (OAF90 for front, OAR90 for rear) and 45 degree (OAF45, OAR45) with 4" on either side of the angle. Custom sizes are available (with an engineering upcharge). The front angle fillers are installed the same as straight fillers using the Keyhole Alignment Method. The rear angle fillers (OARxx) include an angled post with adjustable leg and two (2) panels to fill a corner void where counter top support is required. For rear angle fillers:

1. Partially Install three (3) #10 screws in the holes on each side of the angled post. Do not tighten.
2. Install three (3) #10 screws in the accessory holes on the rear flange of the cabinet(s) or, if using back panels, in the 3 holes in the side of the back panels installed on the adjacent cabinets. Do not tighten.
3. Install the panels using the Keyhole Alignment Method described earlier.
4. Tighten all screws.

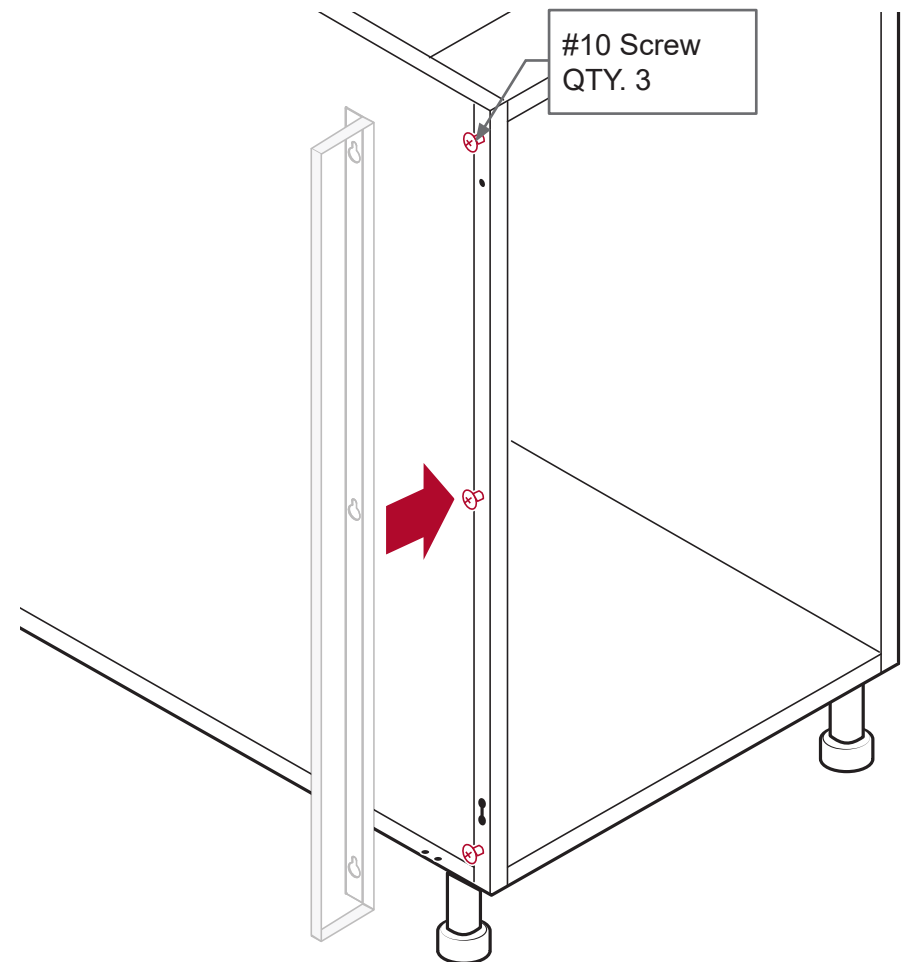

**[Watch Video: Front/Rear Fillers](#)**

*(Click link or scan code)*

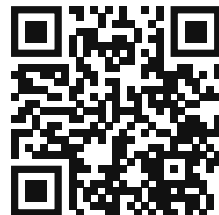


# ASSEMBLY & INSTALLATION: Angle Fillers


---

OAR90 or OAR45 rear support column with back panels.

1. Partially Install three (3) #10 screws in the holes on each side of the rear support column. Do not tighten.

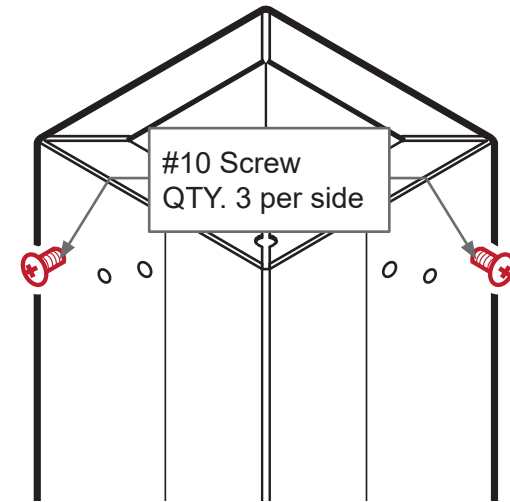

2. Install the panels using the Keyhole Alignment Method described earlier.

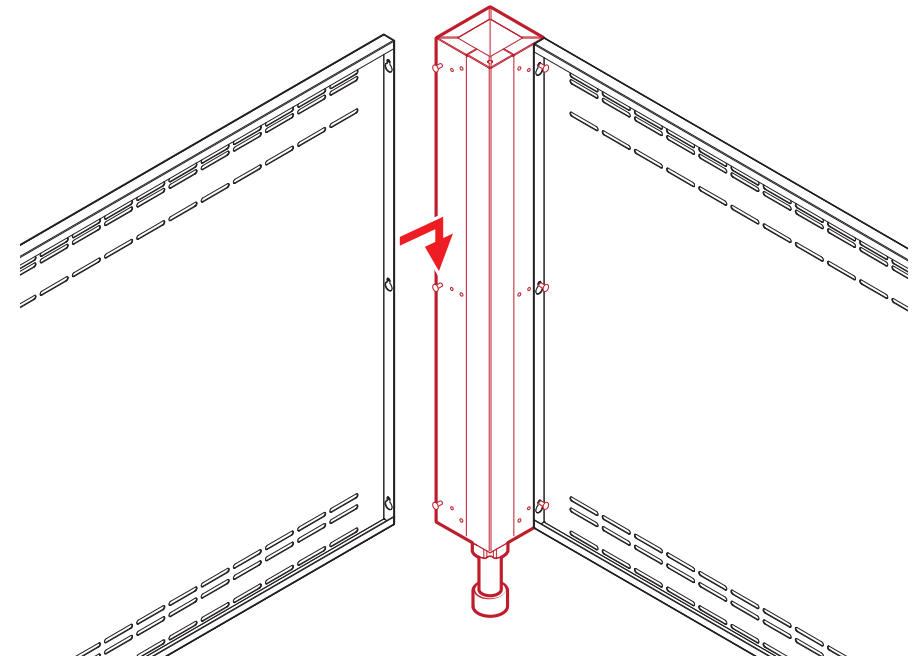


3. Level together in all directions to ensure parts are level, plumb and square. Tighten all screws.


# ASSEMBLY & INSTALLATION: Refrigerator Spacers

---

When building a freestanding island with Denver/BJOK back panels, you will need Refrigerator Spacers of the appropriate size to match the refrigerator's width (ORS15, ORS24, ORS27). These are screwed to the back panels on the adjacent cabinets using the Keyhole Alignment Method. The spacer acts as the back panel behind the refrigerator.

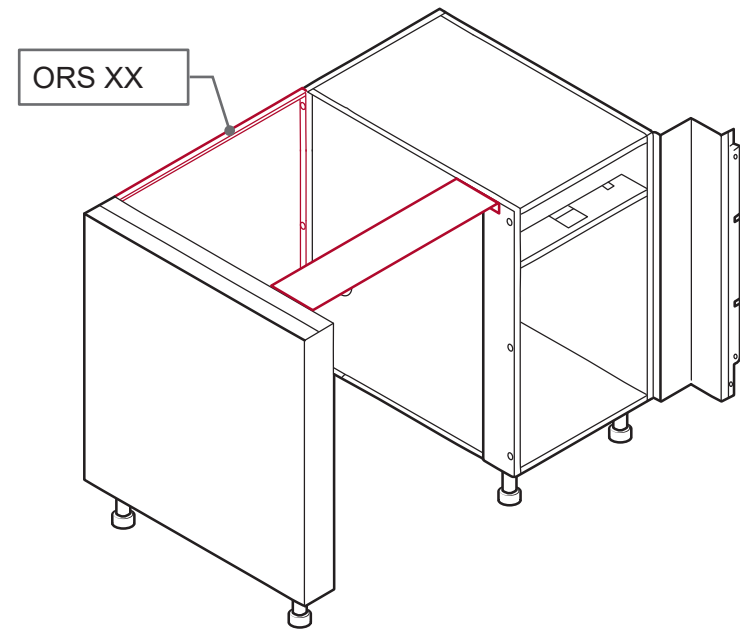

1. When installing two refrigeration appliances (e.g. refrigerator and ice maker or freezer or beer dispenser) next to each other in a freestanding island installation, it is recommended that a support member be installed between the appliances. The support member will shore up the counter top and to provide a better visual appearance. A Box Column (OBX - 2.875" or 3.875" wide and has two leveling legs) of the appropriate depth to match the cabinets is designed for this purpose. It is installed between the two refrigerator spacers at the back using the Keyhole Alignment Method and creates two spaces for the appliances.

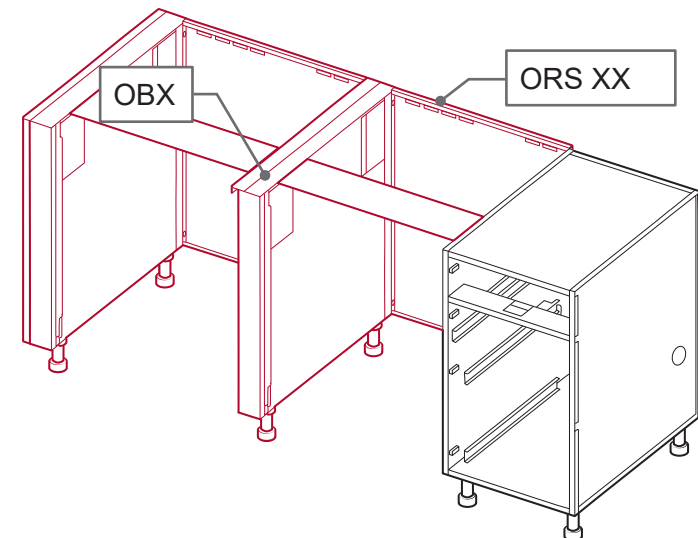


2. When installing refrigerators against a wall, in a surround or enclosure made of stone, stucco brick, etc. it is recommended that the Refrigerator Spacers (ORS) are used to "define" the refrigerator space more precisely versus installing adjacent cabinets and leaving a "void". The same is true with Box Columns (OBX) where two refrigeration devices are installed next to each other in a surround.

# ASSEMBLY & INSTALLATION: Refrigerator Spacers

3. In addition to the refrigerator spacer, when installing a refrigerator at the end of a cabinet run with a stainless side panel and/or back panel(s), you will need a Refrigerator End Panel (ORP - 2.875" or 3.875" wide with two leveling legs) of the appropriate depth.


NOTE: The difference between the ORP and the OBX is that the ORP is completely finished on one side with access holes on the other side while the OBX is finished on the front and back with access holes on both sides. The Keyhole Alignment Method is used to screw the ORP to the refrigerator spacer (ORS) and the spacer to the adjacent cabinet.

4. If the refrigerator is to be installed on one side of a corner, and an OAF (front angle filler) should be used with an OBX support column. In this instance, the OAF will mount in front of the OBX by aligning the screw holes at the front of the OBX with the holes in the OAF but at the back of the OAF.

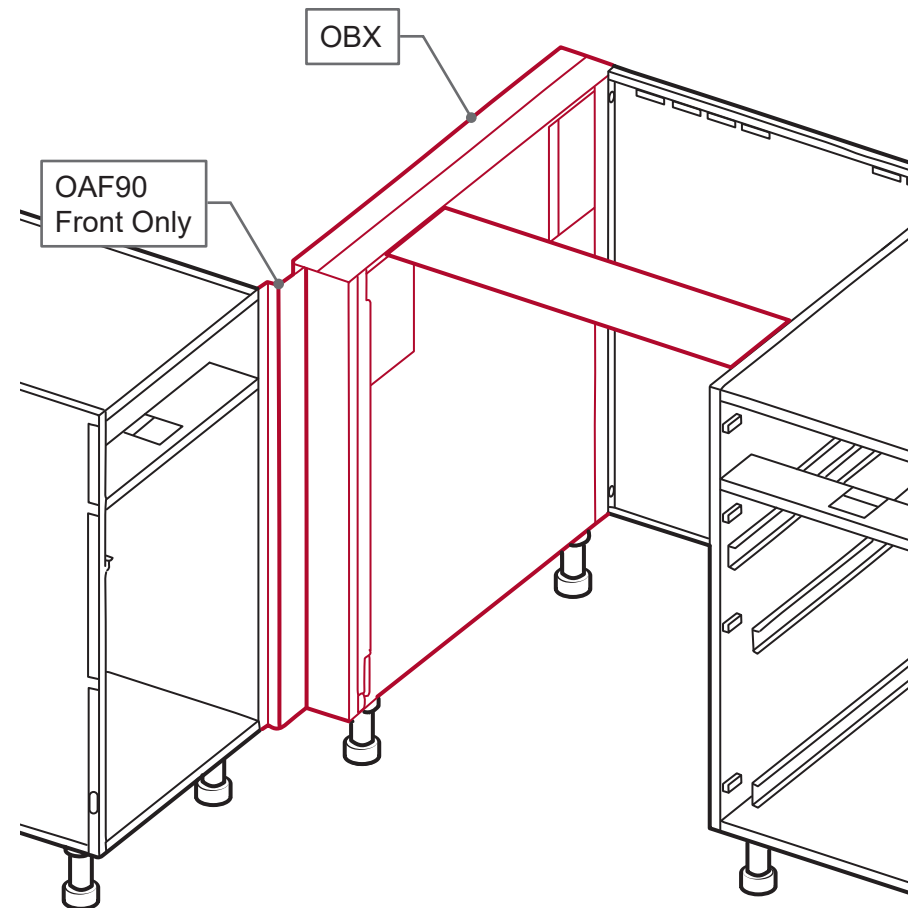


[Watch Video: Refrigerator Corner Unit](#)

(Click link or scan code)

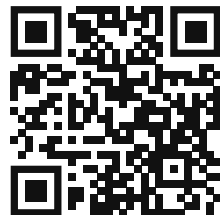

[Watch Video: Refrigerator End Unit](#)


(Click link or scan code)

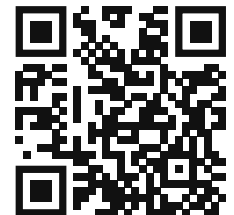


## ASSEMBLY & INSTALLATION: ORP/OBX Leg Cups

---

1. This image shows the front and rear ORP leg cups installed properly. Leg cups are offset by one screw hole to ensure the front column face aligns with the cabinet fronts. The ORP/OBX legs should always align with adjacent cabinets.

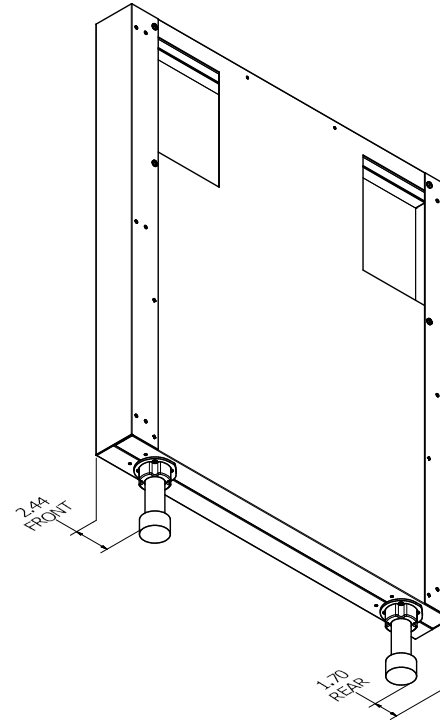


2. If an ORP/OBX needs to be reversed during install, remove the four #10 screws mounting each leg cup. Reinstall the four leg cups according to the mounting hole locations shown in red in Image.

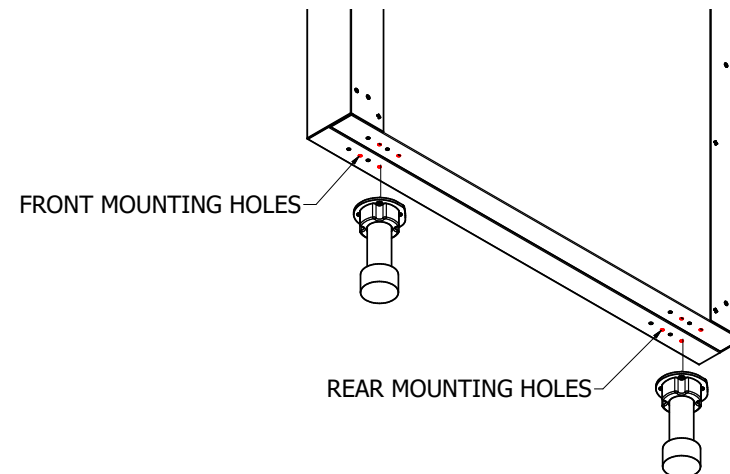

## ASSEMBLY & INSTALLATION: ORP/OBX Leg Cups

---

3. This image shows installed leg cups with measurements. Verify that the front of each column has the front leg cup offset by one screw hole during installation.

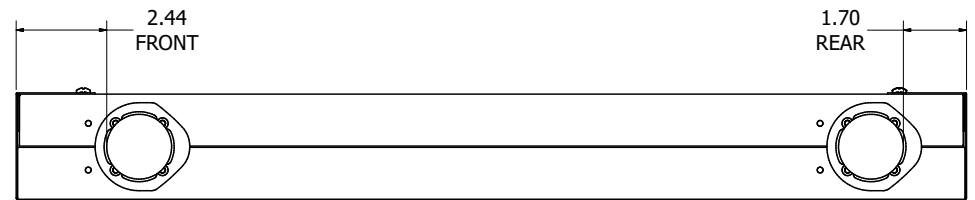


## ASSEMBLY & INSTALLATION: Toe Kick

---


A black 3mm anodized aluminum toe kick with a plastic interior is sold in 7' (84") lengths at 4.375" high.

1. Cut toe kick to the appropriate length for your cabinet run using a saw with blade suitable for cutting anodized aluminum. Lay the toe kick in position in front of the cabinet(s).
2. Drill a 1/8" pilot hole approximately 1/2" below the top of the toe kick.
3. Screw the #8 screw (included) into the receiver of the leg.
4. Repeat for all toe kicks.

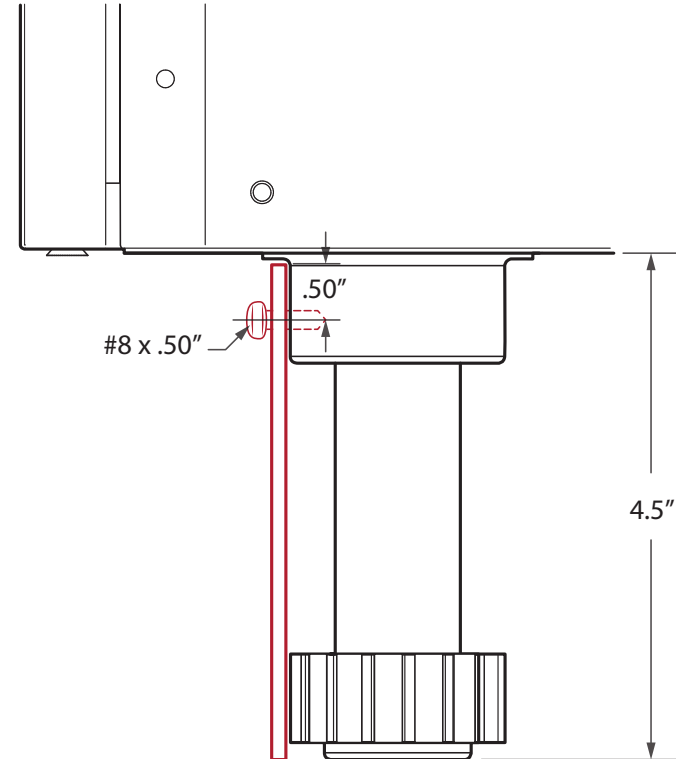

[Watch Video: Install Toe Kick](#)

*(Click link or scan code)*

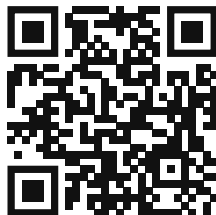




# ASSEMBLY & INSTALLATION: Toe Kick Splice

---

The Toe Kick Splice is used to join two (2) pieces of Toe Kick material together in a run.

1. Cut the Toe Kick to the appropriate length for your cabinet run using a saw with blade suitable for cutting anodized aluminum. Lay the Toe Kick in position in front of the cabinet(s).
2. Insert one side of the Toe Kick into the Toe Kick Splice with the Splice Tabs on the inside.
3. Bend the tabs to secure in place.
4. Repeat for the other side.

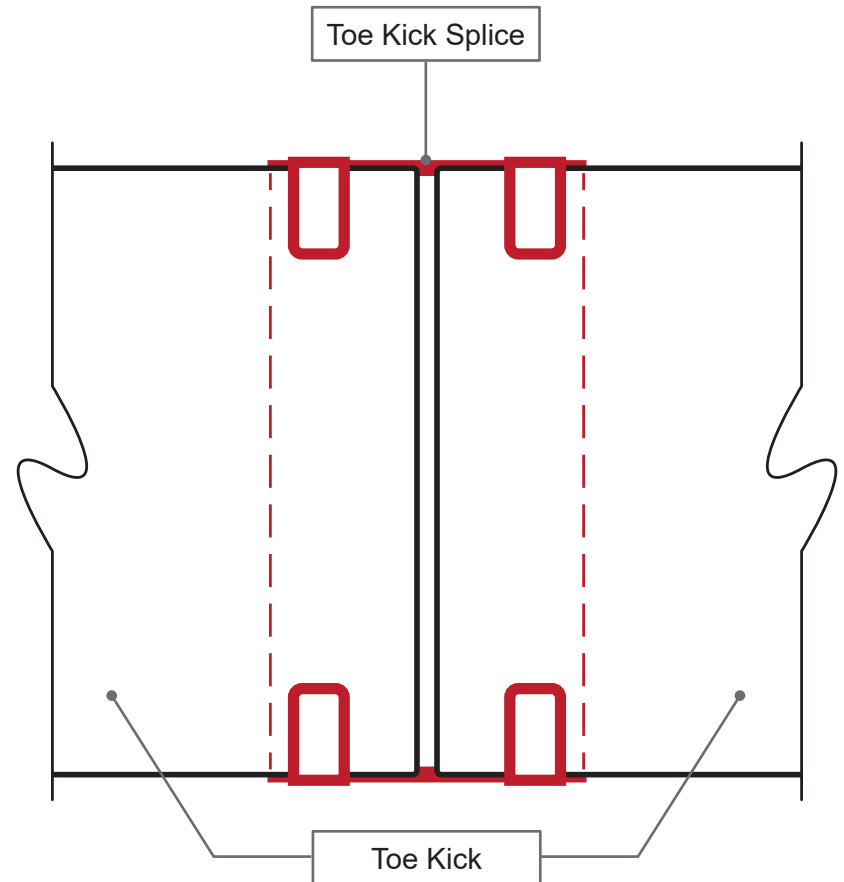


# ASSEMBLY & INSTALLATION: Toe Kick Splice

---

The Toe Kick Corner Splice is available in 90° and 45° angle versions.

1. Cut the Toe Kick to the appropriate length for your cabinet run using a saw with blade suitable for cutting anodized aluminum. Lay the Toe Kick in position in front of the cabinet(s).
2. Insert one side of the Toe Kick into the Toe Kick Splice with the Splice Tabs on the inside.
3. Bend the tabs to secure in place.
4. Repeat for the other side.


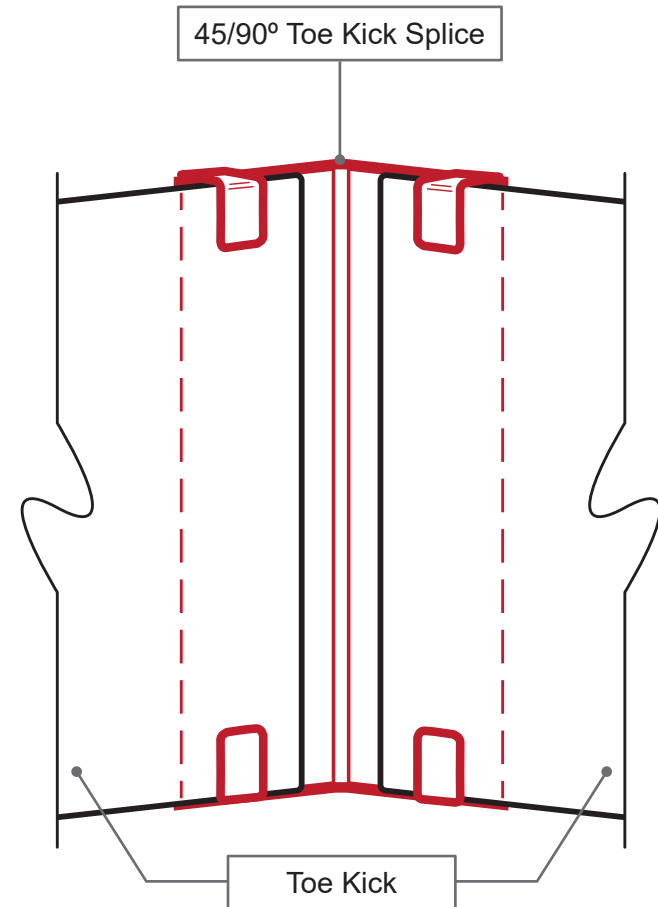


# ASSEMBLY & INSTALLATION: Stainless Steel Leg Covers

---

If optional Stainless Steel (SS) Leg Covers are purchased, they will be packaged inside a carton in each cabinet.

1. Attach inner leg support to the outer SS leg cover.
2. Attach clips (included) using double sided tape to the inside of the SS Leg Cover.
3. Push clip onto plastic leg and adjust to desired placement.

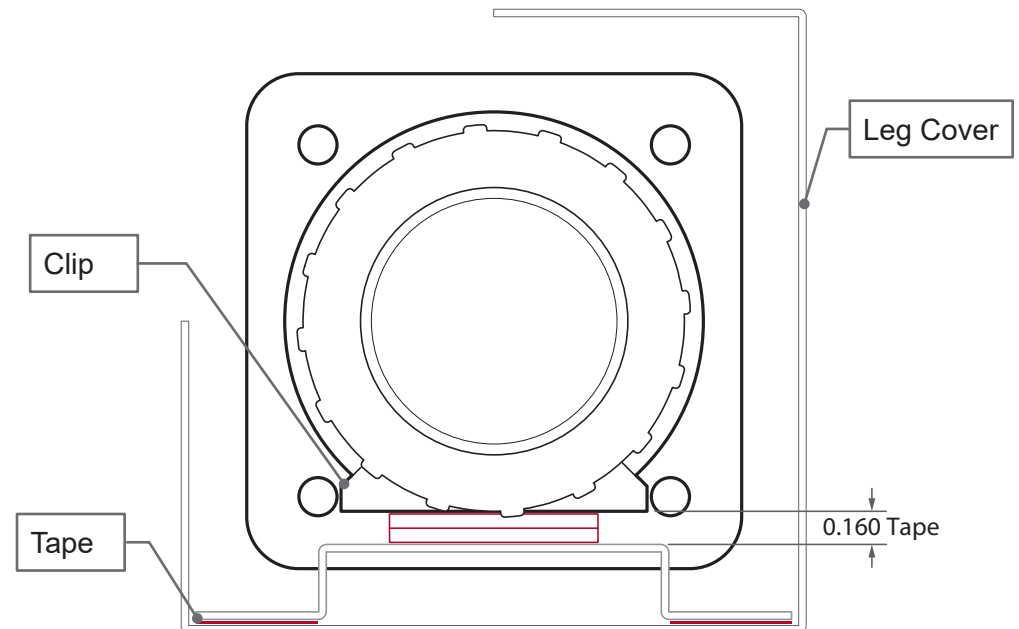
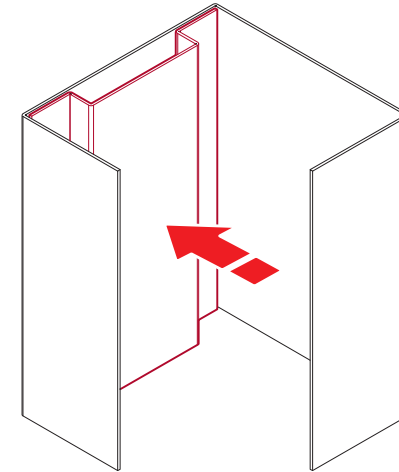


# ASSEMBLY & INSTALLATION: Stainless Steel Leg/ADA Leg Assembly

---

SS Legs and ADA SS Leg are packed in boxes inside the designated cabinet.

1. Cabinets include foot brackets attached to the bottom with #10 screws.
2. Remove the #10 screws, while leaving the foot bracket in place.
3. Place the SS leg on top of the foot bracket while lining the holes up and reinstall the #10 screws.

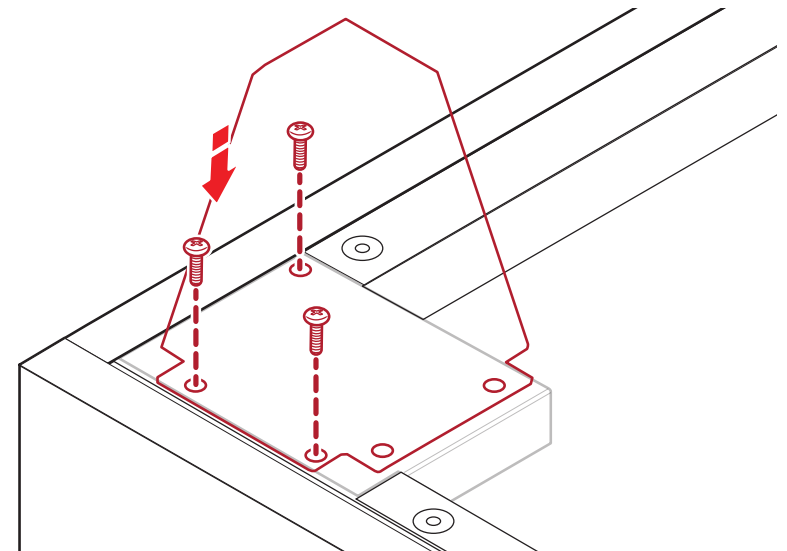
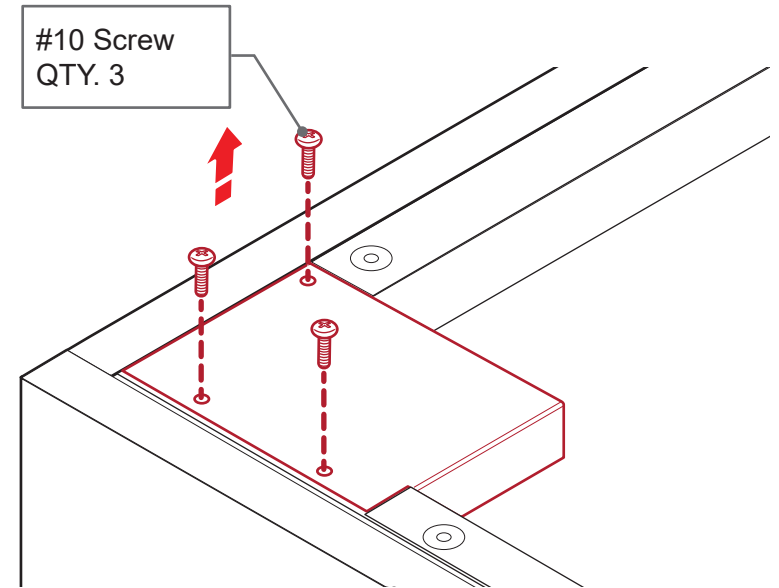


# ASSEMBLY & INSTALLATION: ADA Leg Square

---

ADA Square Legs come attached to foot brackets and are packed in boxes inside the designated cabinet. #10 Screws are included for installation.

1. Place the ADA Square Leg assembly on each corner on the bottom of the cabinet.
2. Attach to the corner with the included #10 screws.

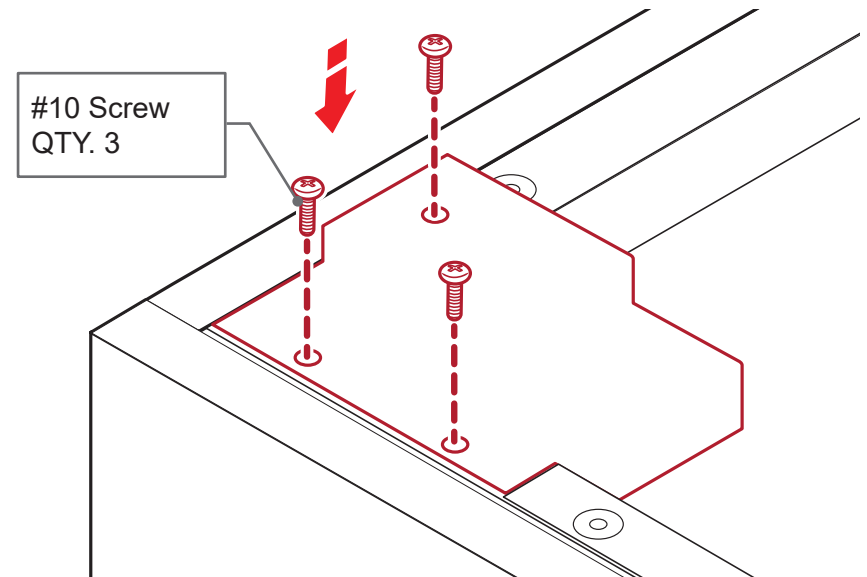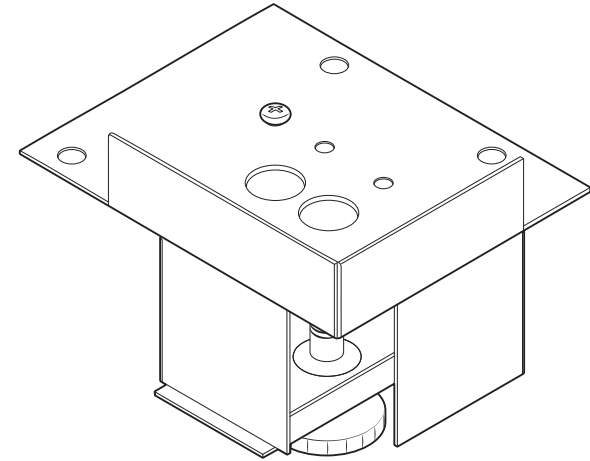


# ASSEMBLY & INSTALLATION: Cabinet Door Adjustment

---

Adjust cabinet doors after all appliances, counter top and other finish work is complete.

1. The front screw is used to center the door in the opening.
2. The rear screw is used to align the front of the door with the cabinet frame and to secure the door to the cabinet. Slightly loosen screw (while holding the door) and slide the door in and out until aligned. Re-tighten.
3. Loosen the hinge plate mounting screws and slide hinges up or down for further adjust, if necessary. Once aligned, re-tighten.

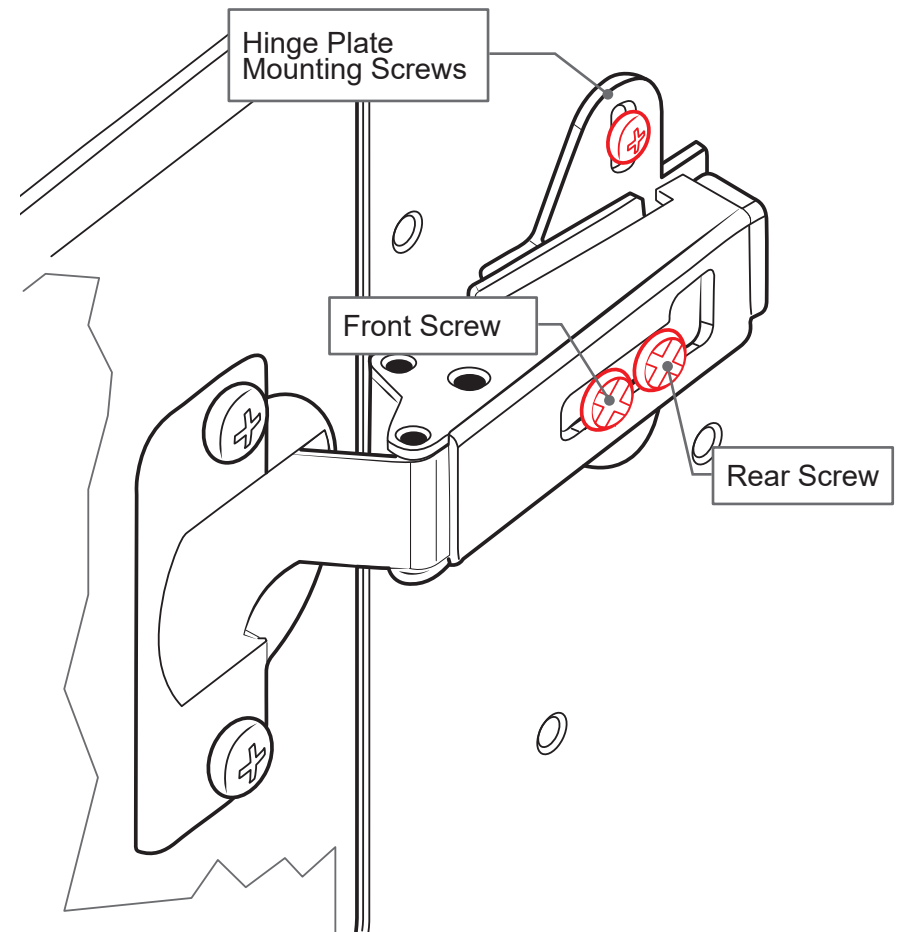


## ASSEMBLY & INSTALLATION: Reinstalling Drawers

---

1. Reinstall drawers by pulling out the slides and placing the drawer on top of the slides.

2. Hold one of the slides at the back and push the drawer so it locks into place.

3. Repeat with the other side. Test drawer for proper opening/closing function.

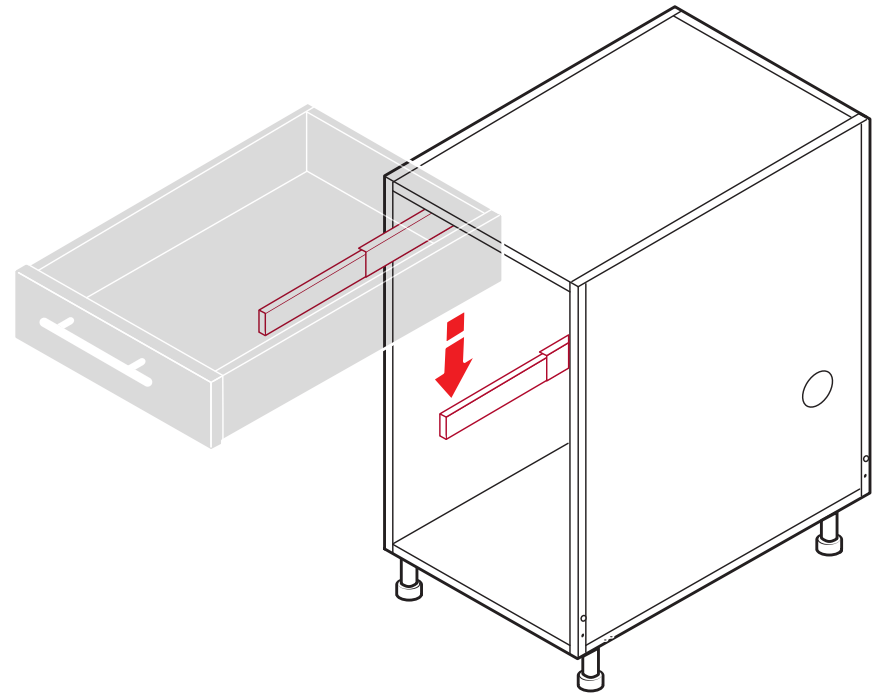


## ASSEMBLY & INSTALLATION: Drawer Adjustment

---

Once cabinets are properly leveled and installed, no drawer adjustment should be required. In the event the drawer does need adjustment, locate the proper adjustment lever(s) on the underside of the drawer.

1. Open the drawer fully.
2. Thumbwheel: adjusts the drawer's position from left to right.
3. Slider: adjusts the drawer's position up and down.
4. Close drawer and check adjustment. Repeat as needed.

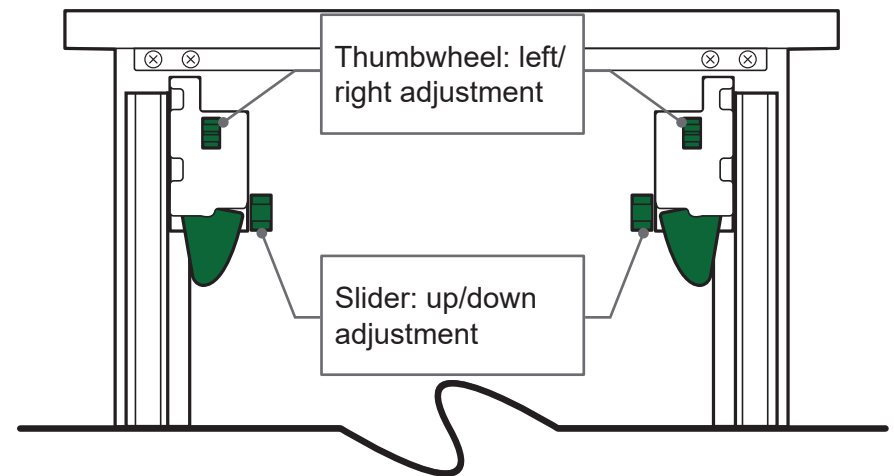




# ASSEMBLY & INSTALLATION: PPS System


The Post and Panel System (PPS) ships flat, requiring assembly.

1. Working from either a standard grill/appliance base cabinet or end panel, attach (4) #10 Screws to the base cabinet. Do not tighten.
2. Attach the Front and Rear Spacer Panels. Tighten the Screws.

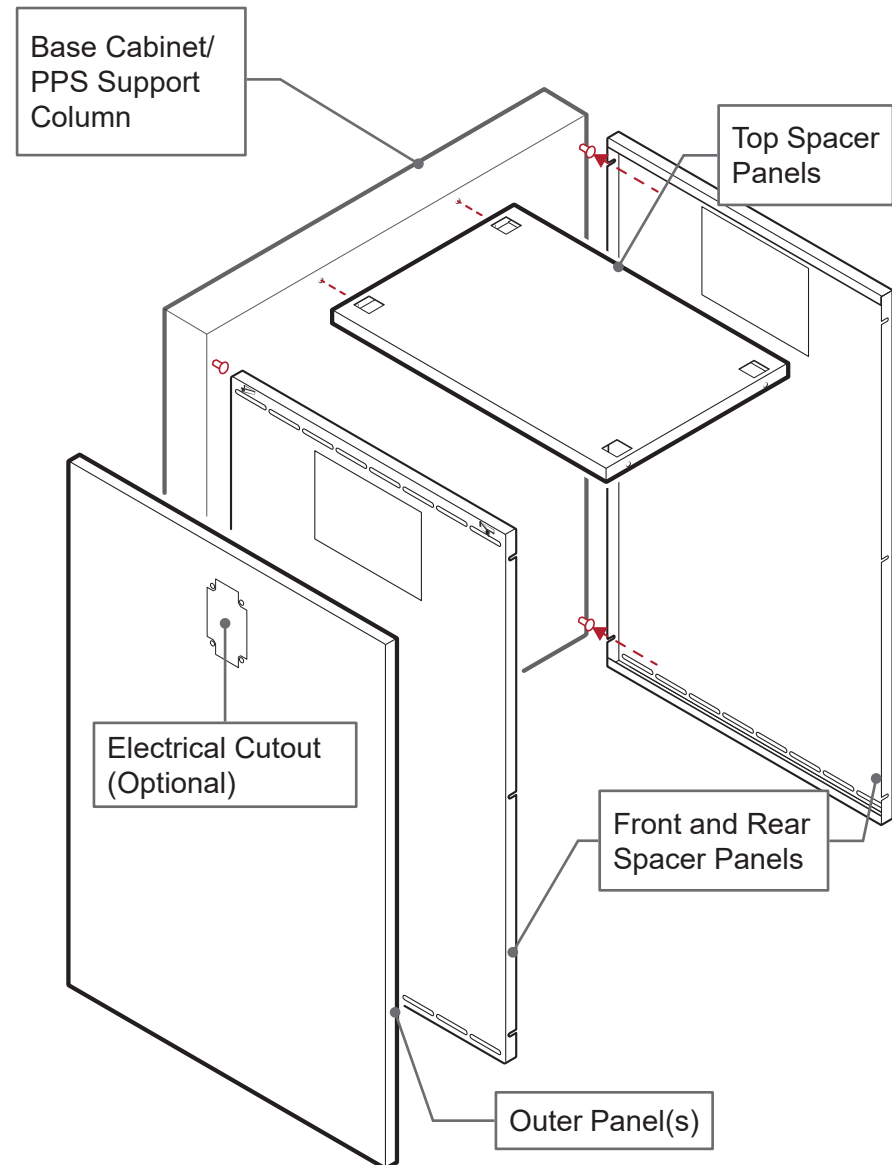

[Watch Video: Install PPS](#)


(Click link or scan code)

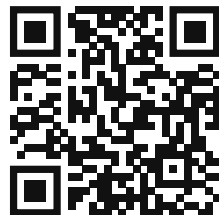

# ASSEMBLY & INSTALLATION: PPS Outer Panels

The Outer Panels\* for the PPS base cabinetry are held in place by 1/4" tabs on the top and bottom.


\*Note: Outer Panels are required, but ordered separately to accommodate possible width differences between the Front/Rear Spacer Panels.

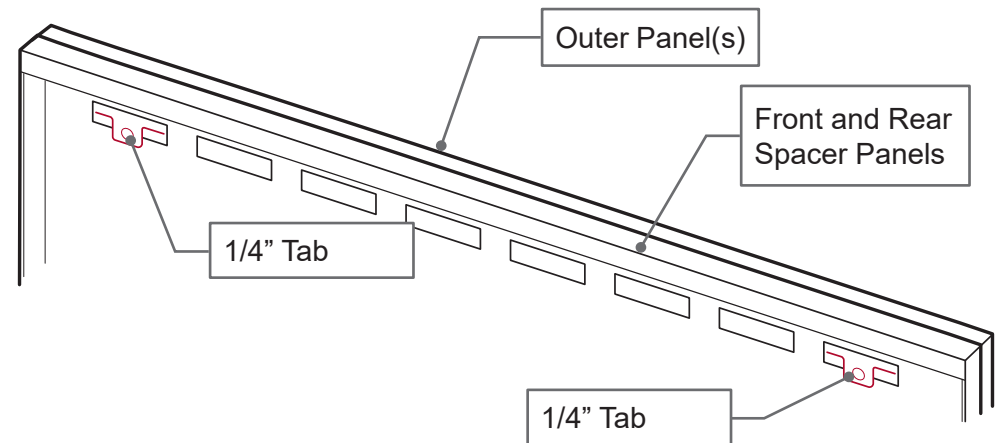

1. Bend the (4) tabs of the Outer Panels.
2. Attach the Top Panel Mounting Brackets (when required) using (2) #10 Screws. Tighten the Screws.

3. Attach the Top Spacer Panel to the Top Panel Mounting Brackets using (2) #10 Screws. Tighten the Screws.



4. OPTIONAL: In high wind areas, use the (2) additional tabs, located on the top of the Front and Rear Spacer Panels to secure the Outer Panels.

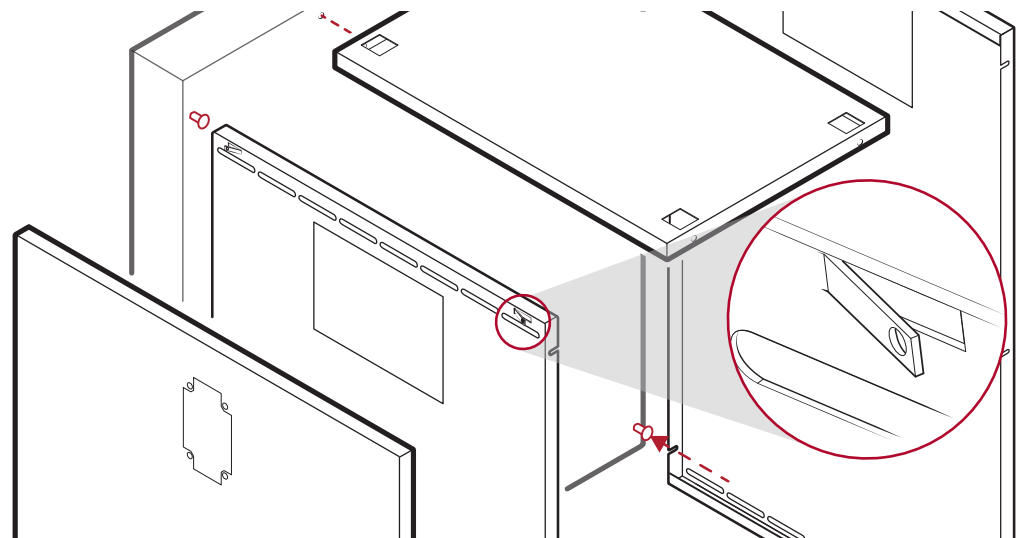

## ASSEMBLY & INSTALLATION: Equal Back Panels

---

The Equal Back Panels for traditional base cabinetry are held in place by 1/4" tabs on the top and bottom. While secure, we do recommend using the plastic tubing (included with the accessories) in the space between the top of the panels and the bottom of the countertop. This will add an additional level of stability to the panels.

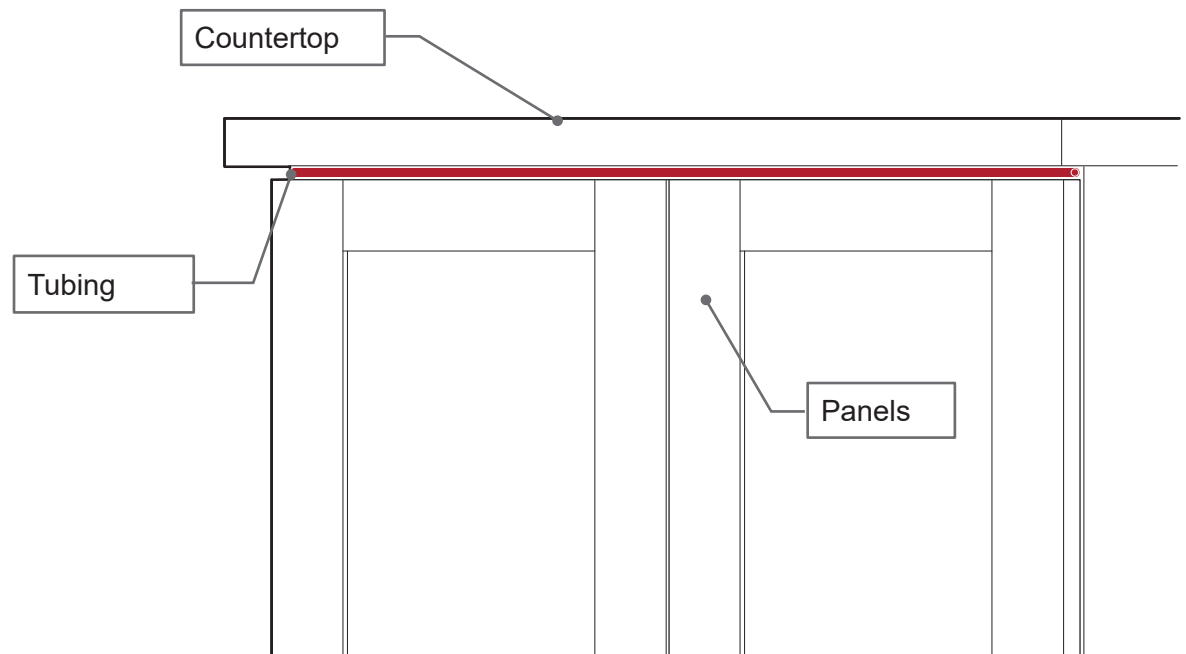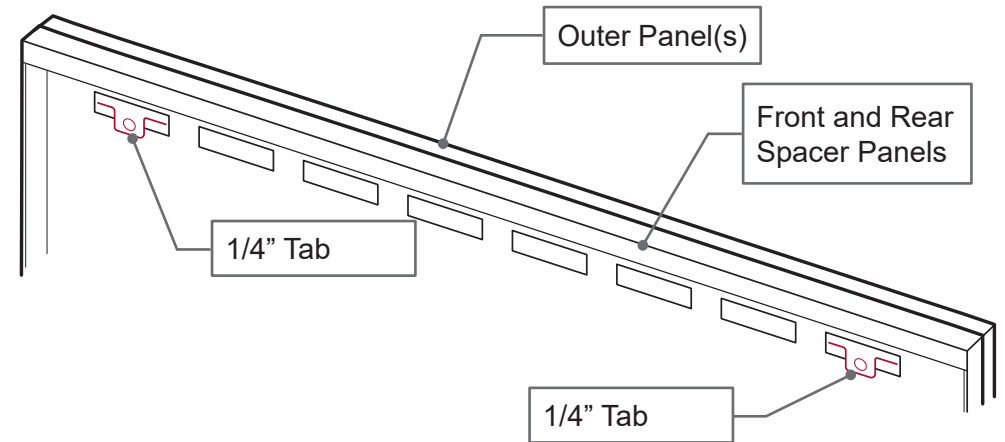

[Watch Video: Install Back Panel](#)

(Click link or scan code)



## ASSEMBLY & INSTALLATION: Side and Back Panels

---




The Side (OSP) and Back (OBP) panels install in the same fashion.

1. Place the panel on the cabinet's bottom lip. The screws on the panel's bottom are for alignment only and will sit in the large holes located in the lip.
2. After the panel is inserted into the cabinet's bottom lip, swing the panel into place.
3. Install the two (2) #10 screws from inside the cabinet into the panel and tighten to secure.

Note: The panel will sit under the top lip of the cabinet and can easily be removed, if necessary.

**[Watch Video: Install Side Panel](#)**

(Click link or scan code)

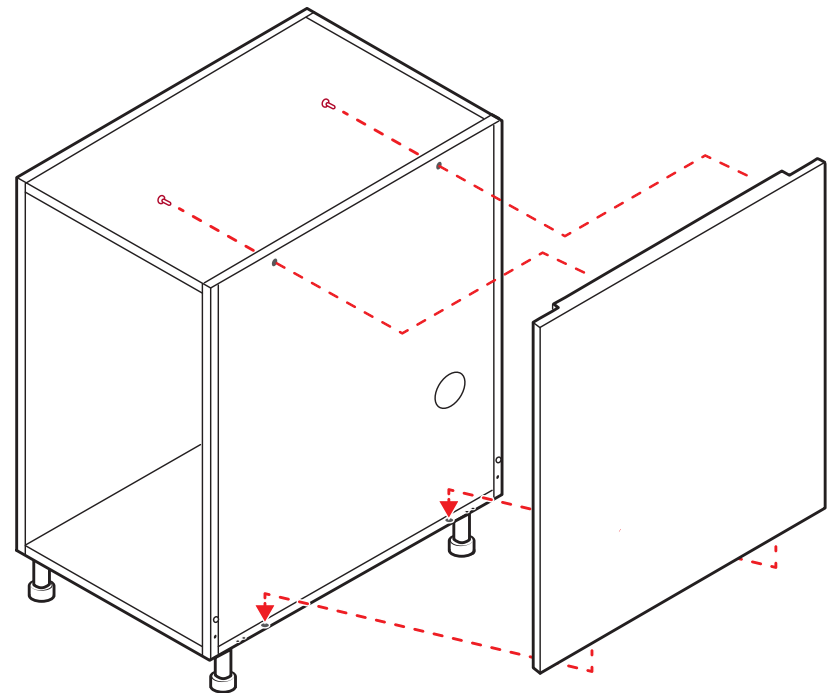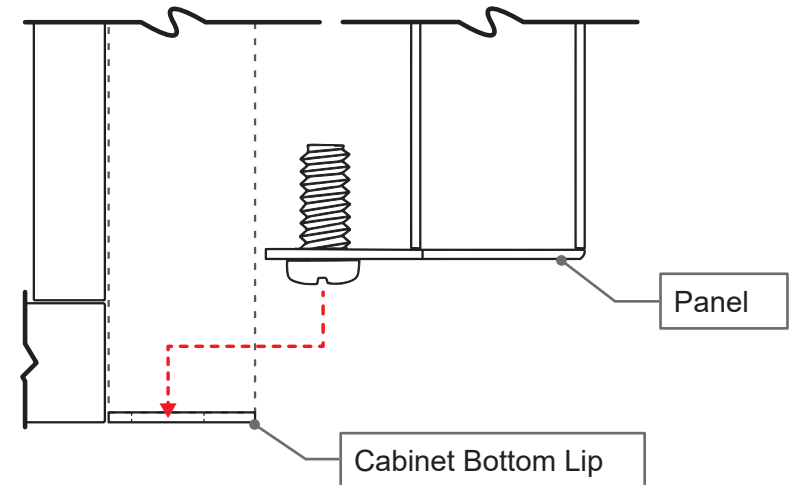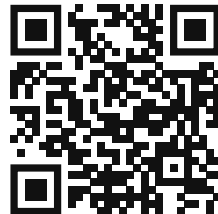

# INSTALLATION: OCPS Column



1. Determine placement of the columns behind the cabinets, against the OBP or OBP EXT.
2. Use the adjustable feet to maintain correct height.
3. Remove the OCPS column cover. Save the hardware.
4. With the OCPS column held in position, drill (6) .156" diameter holes in a staggered pattern from inside, through the OCPS into the OBP (or OBP EXT) panel.

NOTE: Staggered hole location is not critical and dependent on your cabinet and setup.

5. Attach the column using (6) #12 x 3/4 screws into the cabinet.

\*#12 x 2-1/2 screws should be used when attaching to thicker or multiple stacked panels.

6. Reattach the OCPS column cover to the OCPS back using the original hardware.

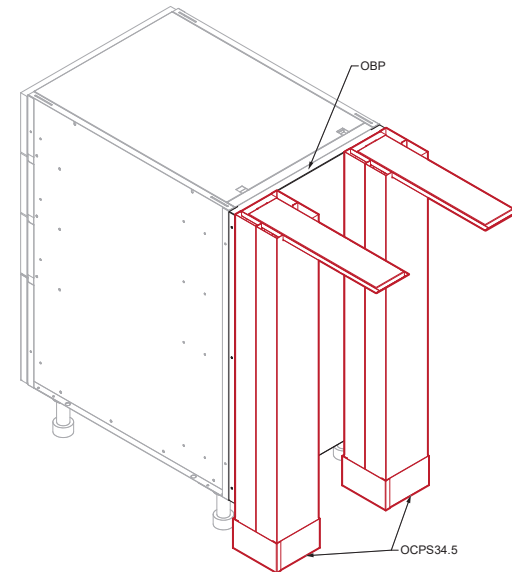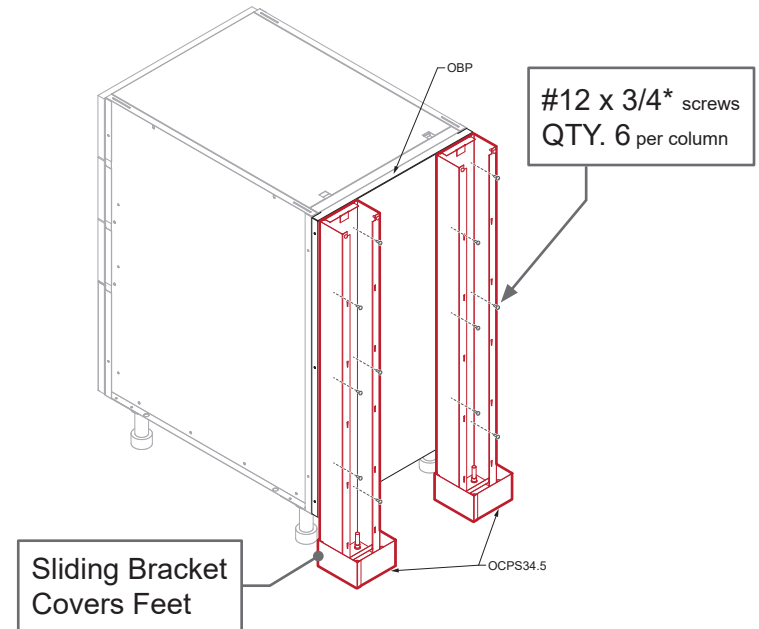


## ASSEMBLY & INSTALLATION: ORP Cabinet Connector

---

ORP Cabinet Connector: Bracket to connect an ORP or OBX countertop support column to adjacent cabinet at end of a run.


1. Attach the Top and Bottom connectors to the ORP.
2. Secure with (2) #10 Screws. Tighten.

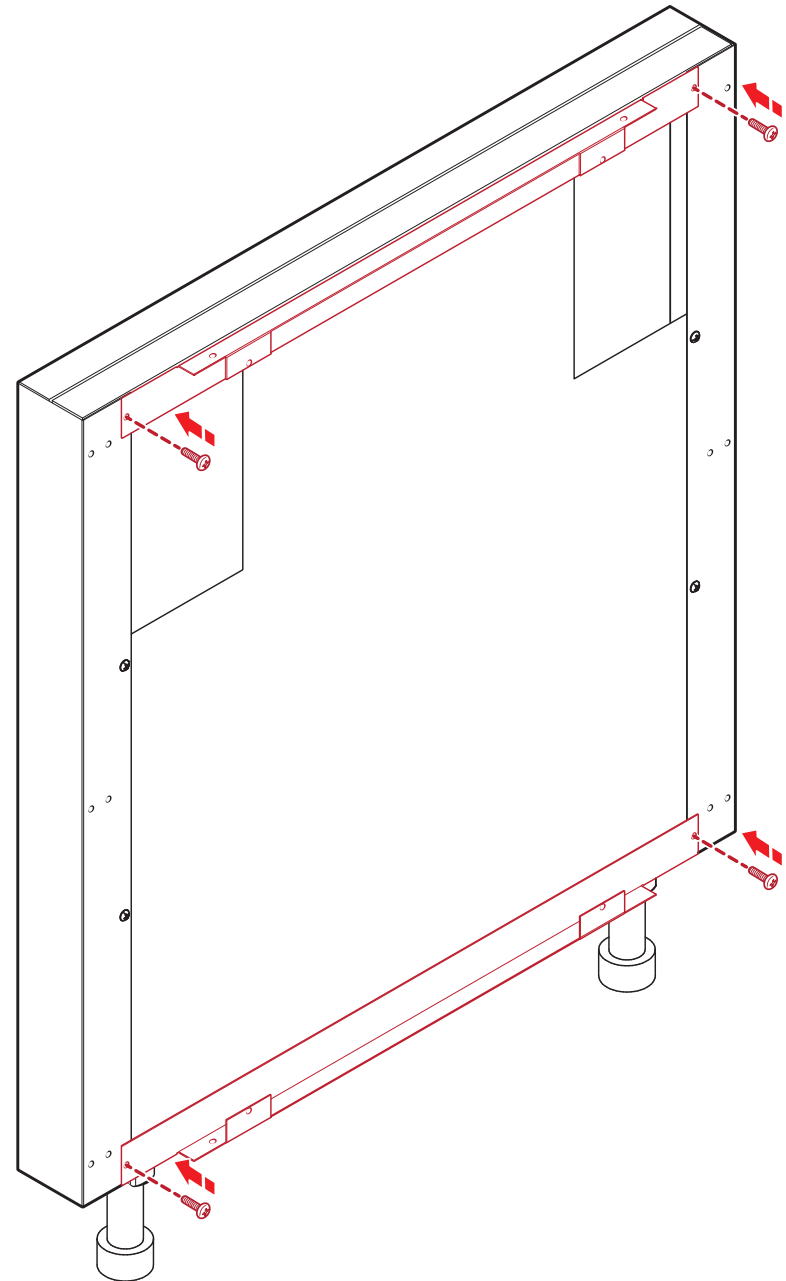

# ASSEMBLY & INSTALLATION: ORP Cabinet Connector

---

The ORP installs onto the cabinetry the following manner:

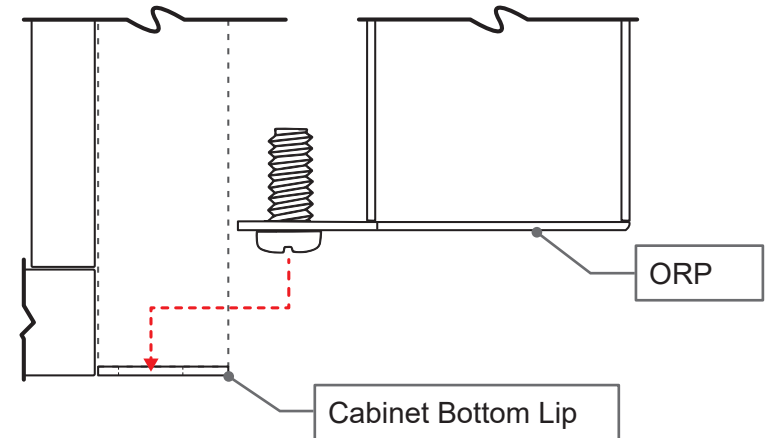


1. Place the ORP on the cabinet's bottom lip. The screws on the ORP bottom are for alignment only and will sit in the large holes located in the lip.

2. After the ORP is inserted into the cabinet's bottom lip, swing the ORP into place.

3. Install the two (2) #10 screws from inside the cabinet into the ORP and tighten to secure.

Note: The ORP will sit under the top lip of the cabinet and can easily be removed, if necessary.

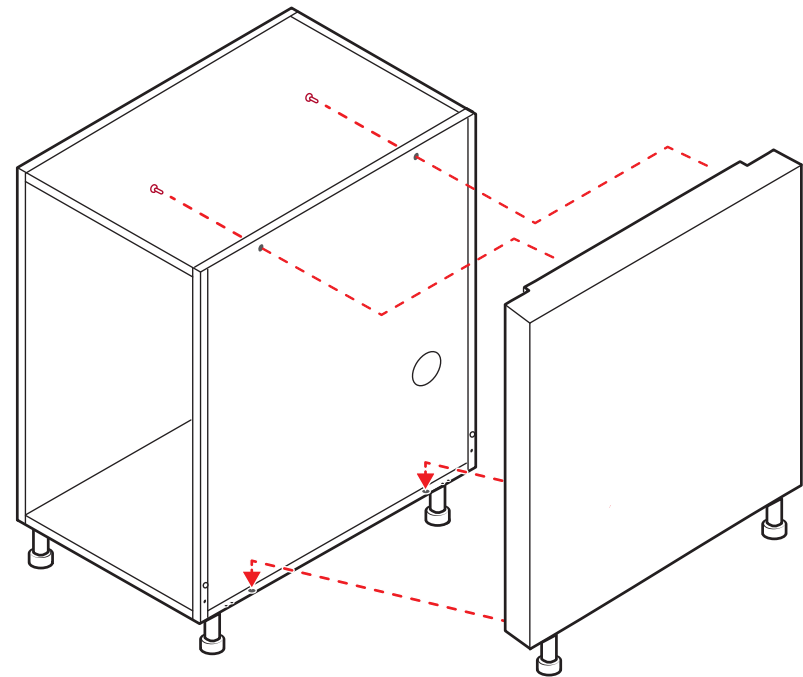


# ASSEMBLY & INSTALLATION: Wall Cabinets

---

Stainless Steel Wall Cabinets install easily using a cleat style system. Please refer to local guidelines when installing to ensure a safe installation.

1. Attach the cleats to the wall, using the supplied # 10 screws. Cleats should be screwed into wall joists for strength.
2. Once secure, “hang” the cabinetry onto cleats.
3. Refer to the figure on the next page for Top/Bottom and Side panel installation notes.

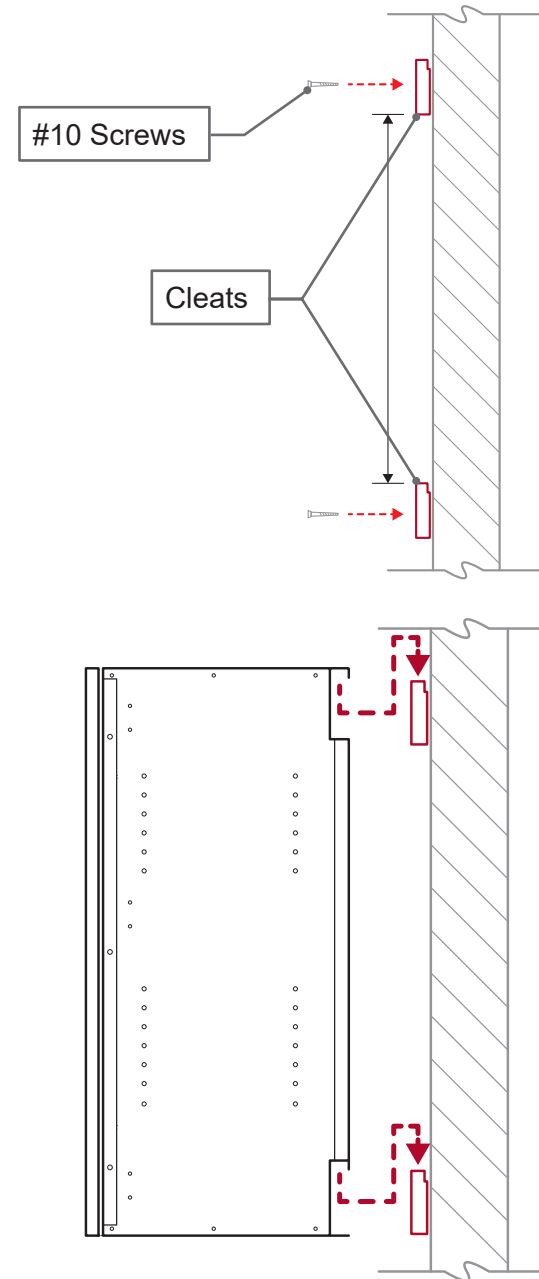



## ASSEMBLY & INSTALLATION: Wall Cabinets

---

